## C1023

### 13N052

E164
Park/turn lamp, left front

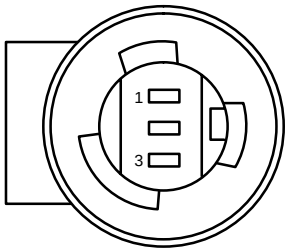


F03113

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 2 (WH/LB) | Turn lamps, feed, right front |
| 2 | 14 (BN) | Power, Exterior lamps |
| 3 | 57 (BK) | Ground |

## C1028

### 14290

K344
Engine cooling fan brake relay

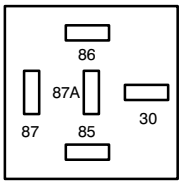


F05051

| Pin | Circuit | Circuit Function |
|---|---|---|
| 87 | 57 (BK) | Ground |
| 87A | 229 (RD/OG) | Low speed fan control relay, switched power |
| 86 | 386 (LB) | Engine cooling fan brake relay, control |
| 85 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |
| 30 | 57 (BK) | Ground |

## C1027

### 14290

R27
Engine cooling fan resistor

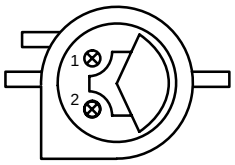


F02046

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 229 (RD/OG) | Low speed fan control relay, switched power |
| 2 | 229 (RD/OG) | Low speed fan control relay, switched power |

## C1041

### 13N052

E7
Headlamp, right

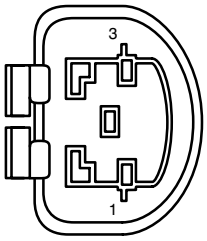


F03169

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 12 (LG/BK) | Power, Hot with High Beams on |
| 2 | 161 (DG/OG) | Headlamp, right, (Low beam lamp feed) |
| 3 | 13 (RD/BK) | Power, Hot with Low Beams on |