## C253

**14401**

N404
Message center switch

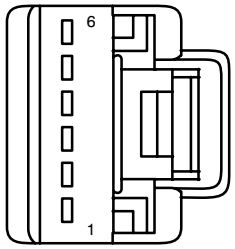


F006179

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 64S-GG25 (BU/OG) | Variable DC voltage (not overload protected), Switched |
| 2 | 31-GG25 (BK) | Ground |
| 3 | 7-GG25 (YE/VT) | Voltage DC supplied at all times (sensor) |
| 4 | – | not used |
| 5 | – | not used |
| 6 | 9-GG25 (BN/WH) | Sensor signal return (reference/ground) |

## C254

**14401**

E28
Glove box lamp (14413)




F02071

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 31-LB8 (BK/OG) | Ground |
| 2 | 29S-LB8 (OG) | Voltage supplied at all times (overload protected), Switched |

## C255

**14401**

B216
Discharge temperature sensor, right




F02056

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 9-FA51 (BN/YE) | Sensor signal return (reference/ground) |
| 2 | 8-FA51 (WH/BK) | Sensor signal |

## C256

**14401**

A43
Passenger air bag module (15044A74)

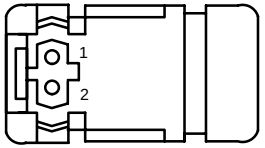


F02123

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 30S-JA11 (RD/WH) | Voltage supplied at all times (not overload protected), Switched |
| 2 | 31S-JA11 (BK/WH) | Ground, Switched |

## C257

**14A005**

N81
Clutch pedal position switch

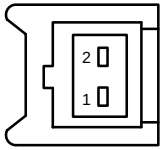


F02113

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 31S-BB12 (BK/YE) | Ground, Switched |
| 2 | 31S-BB6 (BK/YE) | Ground, Switched |