C416

13A409

E48
Turn lamp, right rear

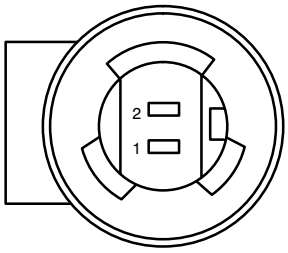

F02079

Pin	Circuit	Circuit Function
1	29S-LG12 (OG/YE)	Voltage supplied at all times (overload protected), Switched
2	31S-LG12 (BK/YE)	Ground, Switched

C417

13A409

E10
Lamp assembly, right rear

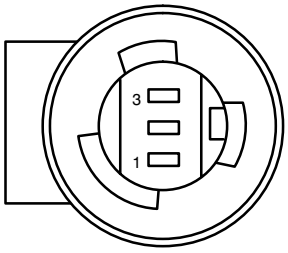

F03113

Pin	Circuit	Circuit Function
1	29S-LF23 (OG)	Voltage supplied at all times (overload protected), Switched
2	31S-LF11A (BK/WH)	Ground, Switched
3	31S-LG14 (BK/OG)	Ground, Switched

C418

14A005

E207
Tail lamp, right

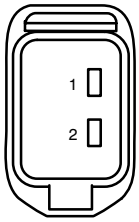

F02095

Pin	Circuit	Circuit Function
1	29S-LF20 (OG)	Voltage supplied at all times (overload protected), Switched
2	31S-LF20 (BK/OG)	Ground, Switched

C419

14A005

E206
Tail lamp, left

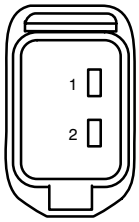

F02095

Pin	Circuit	Circuit Function
1	29S-LF11 (OG/WH)	Voltage supplied at all times (overload protected), Switched
2	31S-LF11 (BK/WH)	Ground, Switched