C801 (GY)

14632

Window adjust switch, right rear (14A412)

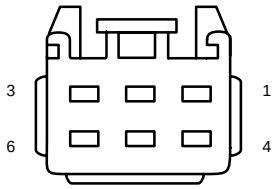

F06214

Pin	Circuit	Circuit function
1	320 (RD/BK)	Window switch, feed, right rear, Down
2	334 (RD/YE)	Window motor, feed, Down
3	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	1159 (WH/LB)	Window motor, feed, Up
6	319 (YE/BK)	Window switch, feed, right rear, Up

C803 (BK)

14632

Power window motor, right rear (23394)

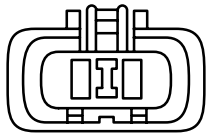

F02225

Pin	Circuit	Circuit function
1	334 (RD/YE)	Window motor, feed, Down
2	1159 (WH/LB)	Window motor, feed, Up

C804 (BK)

14632

Door lock actuator, right rear (218A42)

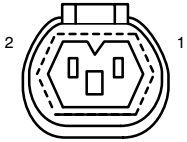

F02227

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C810 (GY)

14632

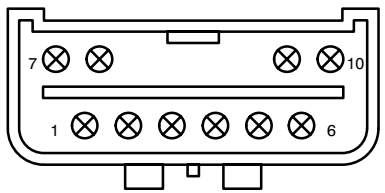

F10025

(1) 118 (PK/OG)
(2) 117 (PK/BK)
(3) 57 (BK)
(4) 760 (PK/LB)
(5) –
(6) 320 (RD/BK)
(7) 170 (RD/LB)
(8) –
(9) –
(10) 316 (YE/BK)

14A005

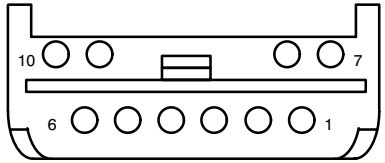

F10009

(1) 118 (PK/OG)
(2) 117 (PK/BK)
(3) 57 (BK)
(4) 760 (PK/LB)
(5) –
(6) 320 (RD/BK)
(7) 170 (RD/LB)
(8) –
(9) –
(10) 316 (YE/BK)