Component Testing – Seat adjust switch, passenger side front

SCHEMATIC

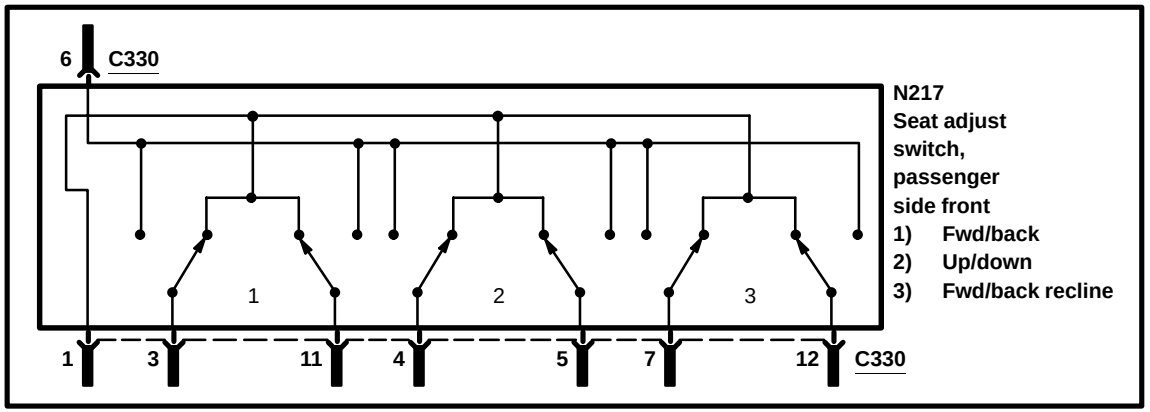

TERMINAL LOCATIONS

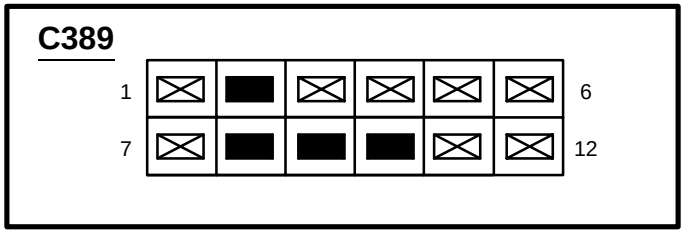

COMPONENT TESTING PROCEDURE

TO TEST	Connect Self-Powered Test Light or Ohmmeter to Terminals	Move Switch to These Positions	A Good Switch Will Indicate
Backrest Circuit	6 and 7	Rest/Backrest Rearward	Open Circuit
		Backrest Forward	Closed Circuit
	6 and 12	Rest/Backrest Forward	Open Circuit
		Backrest Rearward	Closed Circuit
Forward/Rearward Circuit	3 and 6	Rest/Seat Rearward	Open Circuit
		Seat Forward	Closed Circuit
	6 and 11	Rest/Seat Forward	Open Circuit
		Seat Rearward	Closed Circuit
Height Circuit	5 and 6	Rest/Front Height Down	Open Circuit
		Front Height Up	Closed Circuit
	4 and 6	Rest/Front Height Up	Open Circuit
		Front Height Down	Closed Circuit