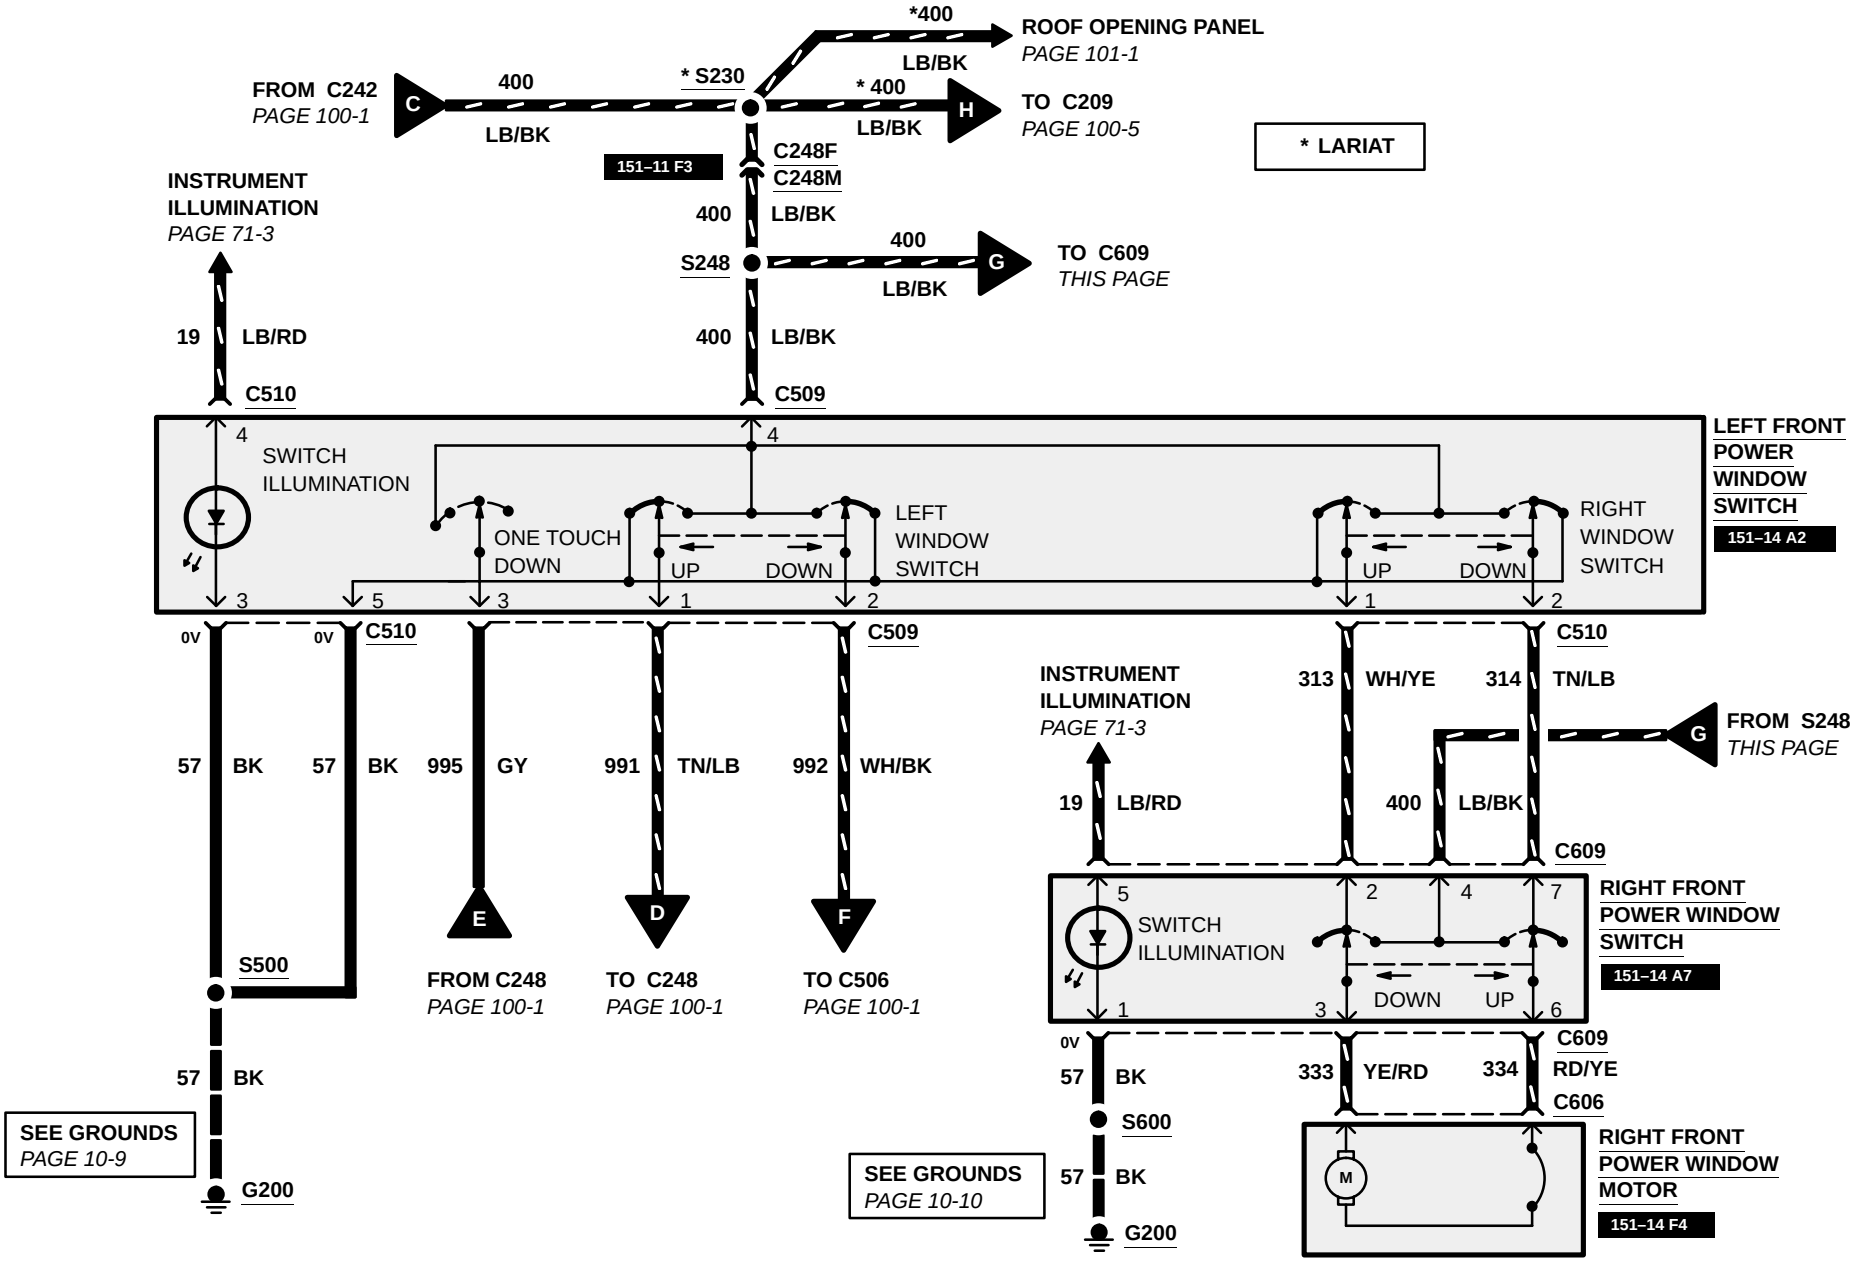
*400
ROOF OPENING PANEL
PAGE 101-1
LB/BK
FROM C242
PAGE 100-1
C
400
* S230
* 400
LB/BK
H
TO C209
PAGE 100-5
LB/BK
* LARIAT
151–11 F3
C248F
C248M
INSTRUMENT ILLUMINATION
PAGE 71-3
400
LB/BK
400
S248
G
TO C609
THIS PAGE
LB/BK
19
LB/RD
400
LB/BK
C510
C509
LEFT FRONT POWER WINDOW SWITCH
151–14 A2
SWITCH ILLUMINATION
ONE TOUCH DOWN
UP
DOWN
LEFT WINDOW SWITCH
RIGHT WINDOW SWITCH
UP
DOWN
0V
0V
C510
C509
INSTRUMENT ILLUMINATION
PAGE 71-3
313
WH/YE
314
TN/LB
C510
G
FROM S248
THIS PAGE
57
BK
57
BK
995
GY
991
TN/LB
992
WH/BK
19
LB/RD
400
LB/BK
C609
RIGHT FRONT POWER WINDOW SWITCH
151–14 A7
SWITCH ILLUMINATION
DOWN
UP
E
D
F
S500
FROM C248
PAGE 100-1
TO C248
PAGE 100-1
TO C506
PAGE 100-1
0V
57
BK
333
YE/RD
334
RD/YE
C609
C606
57
BK
S600
RIGHT FRONT POWER WINDOW MOTOR
151–14 F4
M
SEE GROUNDS
PAGE 10-9
SEE GROUNDS
PAGE 10-10
57
BK
G200
G200