## C1069

**14290**

N88
Low coolant level switch

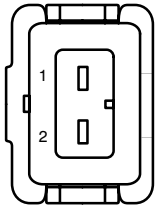


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 465 (WH/LB) | Low coolant level switch, input |
| 2 | 57 (BK) | Ground |

## C1072

**12B637**

Y205
EGR vacuum regulator solenoid (9J459)

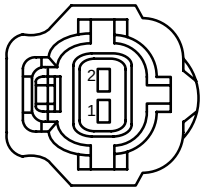


F02027

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |
| 2 | 360 (BN/PK) | EGR Vacuum Regulator (EVR), control |

## C1073

**12B637**

B230
Injector pressure sensor

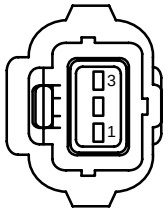


F03093

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 351 (BN/WH) | Reference, voltage |
| 2 | 359 (GY/RD) | signal, return |
| 3 | 925 (WH/YE) | Injector pressure sensor, input |

## C1074

**14290**

M237
Engine cooling fan motor 1




F03057

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 228 (DB) | Engine cooling fan motor 1, switched power |
| | 229 (RD/OG) | Engine cooling fan motor 1, switched power |
| 3 | 229 (RD/OG) | Engine cooling fan motor 1, switched power |

## C1077

**14290**

M238
Engine cooling fan motor 2




F03057

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 229 (RD/OG) | Engine cooling fan motor 2, switched power |
| 3 | 229 (RD/OG) | Engine cooling fan motor 2, switched power |