C505 (GN)

14A488

Door lock switch, driver side (14028)

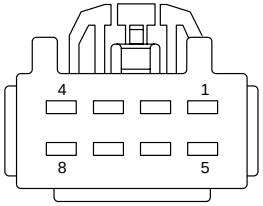

F08165

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock, input
4	1205 (BK)	Ground
5	235 (RD/BK)	Door lock switch, driver side (14028), Illumination
6	–	not used
7	119 (PK/YE)	Door lock, input
8	–	not used

C509 (BK)

14A584

Anti–theft inhibit switch

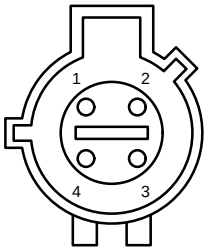

F04075

Pin	Circuit	Circuit function
1	24 (DB/OG)	not used
2	25 (DG/VT)	Anti–theft, switch, disarm
3	–	not used
4	1205 (BK)	Ground