-91

## C840

**14K733**

F47006

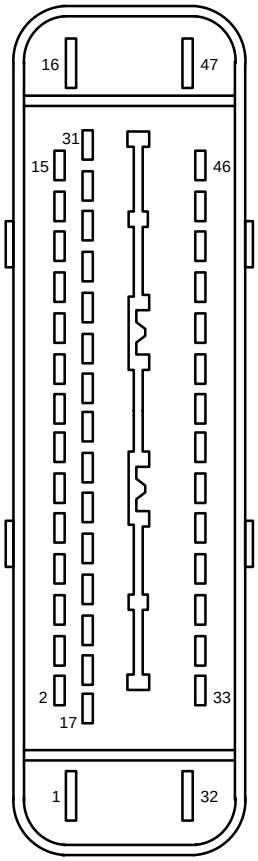


A7
ABS control module

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 30-CF13A (RD) | Voltage supplied at all times (not overload protected) |
| 2 | 8-EE6A (WH) | Sensor signal |
| 3 | 8-CE8 (WH/BU) | Sensor signal |
| 4 | 15-CF6A (GN/YE) | Voltage, ignition switch in Start or Run (not overload protected) |
| 5 | 9-CF1 (BN/RD) | Sensor signal return (reference/ground) |
| 6 | 10-CE8 (GY/VT) | Sensor signal |
| 7 | 7-CF1 (YE/RD) | Voltage D.C. supplied at all times (sensor) |
| 8 | – | not used |
| 9 | – | not used |
| 10 | – | not used |
| 11 | – | not used |
| 12 | 4-EG6 (GY) | Data link, bus positive |
| 13 | 31S-CF45A (BK/GN) | Ground, switched |
| 14 | 5-EG6 (BU) | Data link, bus negative |
| 15 | – | not used |
| 16 | 91-CF6 (BK/YE) | Ground |
| 17 | – | not used |
| 18 | 7-CF64 (YE/BK) | Voltage D.C. supplied at all times (sensor) |
| 19 | 9-CF64 (BN/YE) | Sensor signal return (reference/ground) |
| 20 | 8-CF64 (WH/BK) | Sensor signal |
| 21 | – | not used |
| 22 | – | not used |
| 23 | – | not used |
| 24 | – | not used |
| 25 | 5-EC12 (BU/RD) | Data link, bus negative |
| 26 | – | not used |
| 27 | – | not used |
| 28 | – | not used |
| 29 | 4-EC12 (GY/RD) | Data link, bus positive |
| 30 | – | not used |
| 31 | – | not used |
| 32 | 30-CF6A (RD) | |
| 33 | 9-CF38 (BN/RD) | Sensor signal return (reference/ground) |
| 34 | 8-CF38 (WH/RD) | Sensor signal |
| 35 | 31S-CF45A (BK/GN) | Ground (power return), switched |
| 36 | 8-CF34 (WH/BU) | Sensor signal |

-92

| Pin | Circuit | Circuit Function |
|---|---|---|
| 37 | 9-CF34 (BN/BU) | Sensor signal return (reference/ground) |
| 38 | 91S-CF54 (BK/WH) | Ground, switched |
| 39 | 31S-CF45 (BK/GN) | Ground, switched |
| 40 | – | not used |
| 41 | 15S-CF58 (GN/OG) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 42 | 9-CF40 (BN/GN) | Sensor signal return (reference/ground) |
| 43 | 8-CF40 (WH/GN) | Sensor signal |
| 44 | 31S-CF28 (BK/RD) | Ground, switched |
| 45 | 8-CF32 (WH) | Sensor signal |
| 46 | 9-CF32 (BN) | Sensor signal return (reference/ground) |
| 47 | 91-CF13 (BK/BU) | Ground |