C2026c (BK)

14N104

A11
Radio (18806)

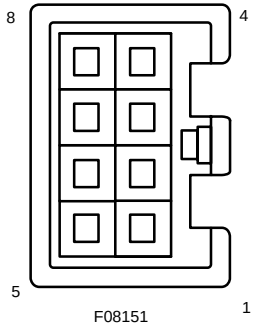

F08151

Pin	Circuit	Circuit function
1	RB53 (BU)	Radio (18806), to Subwoofer
2	RB52 (WH)	Radio (18806), to Subwoofer
3	RB98	Shield
4	RB55 (OG)	Radio (18806), to Subwoofer
5	–	not used
6	–	not used
7	–	not used
8	–	not used

C2028a (GY)

14N104

A205
Electronic Automatic Temperature Control (EATC) module (19980)

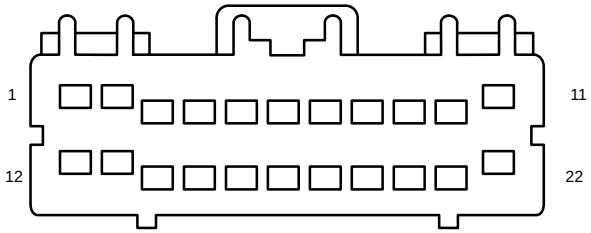

F22007

Pin	Circuit	Circuit function
1	HC04 (GN/WH)	In–vehicle temperature sensor (19C734), input
2	HC05 (GN/BK)	Sunload sensor (19E663), input
3	HCE2 (BK)	Sensor signal return (reference/ground)
4	HC03 (VT)	Coolant temperature sensor 1, input
5	HC17 (RD/WH)	Ambient air temperature sensor (19E702), input
6	HC06 (YE/GN)	Instrument cluster, from EATC
7	HA14 (BN)	Mode actuator, from EATC
8	HA11 (LG)	Mode actuator
9	HA16 (BU/WH)	Mode actuator, from EATC
10	HA02 (BN/WH)	A/C demand signal
11	HB22 (BU/YE)	Rear blower motor relay, control
12	HC14 (YE/BU)	Air inlet door variable resistor, wiper
13	HC16 (YE/RD)	Air inlet door variable resistor –
14	HC15 (YE/GN)	Air inlet door variable resistor +
15	–	not used
16	–	not used
17	–	not used
18	–	not used
19	HA15 (BN/YE)	Mode actuator, from EATC
20	HA04 (BK/RD)	Mode actuator, from EATC
21	HA12 (LG/RD)	Mode actuator, from EATC
22	HA13 (LB)	Mode actuator, from EATC