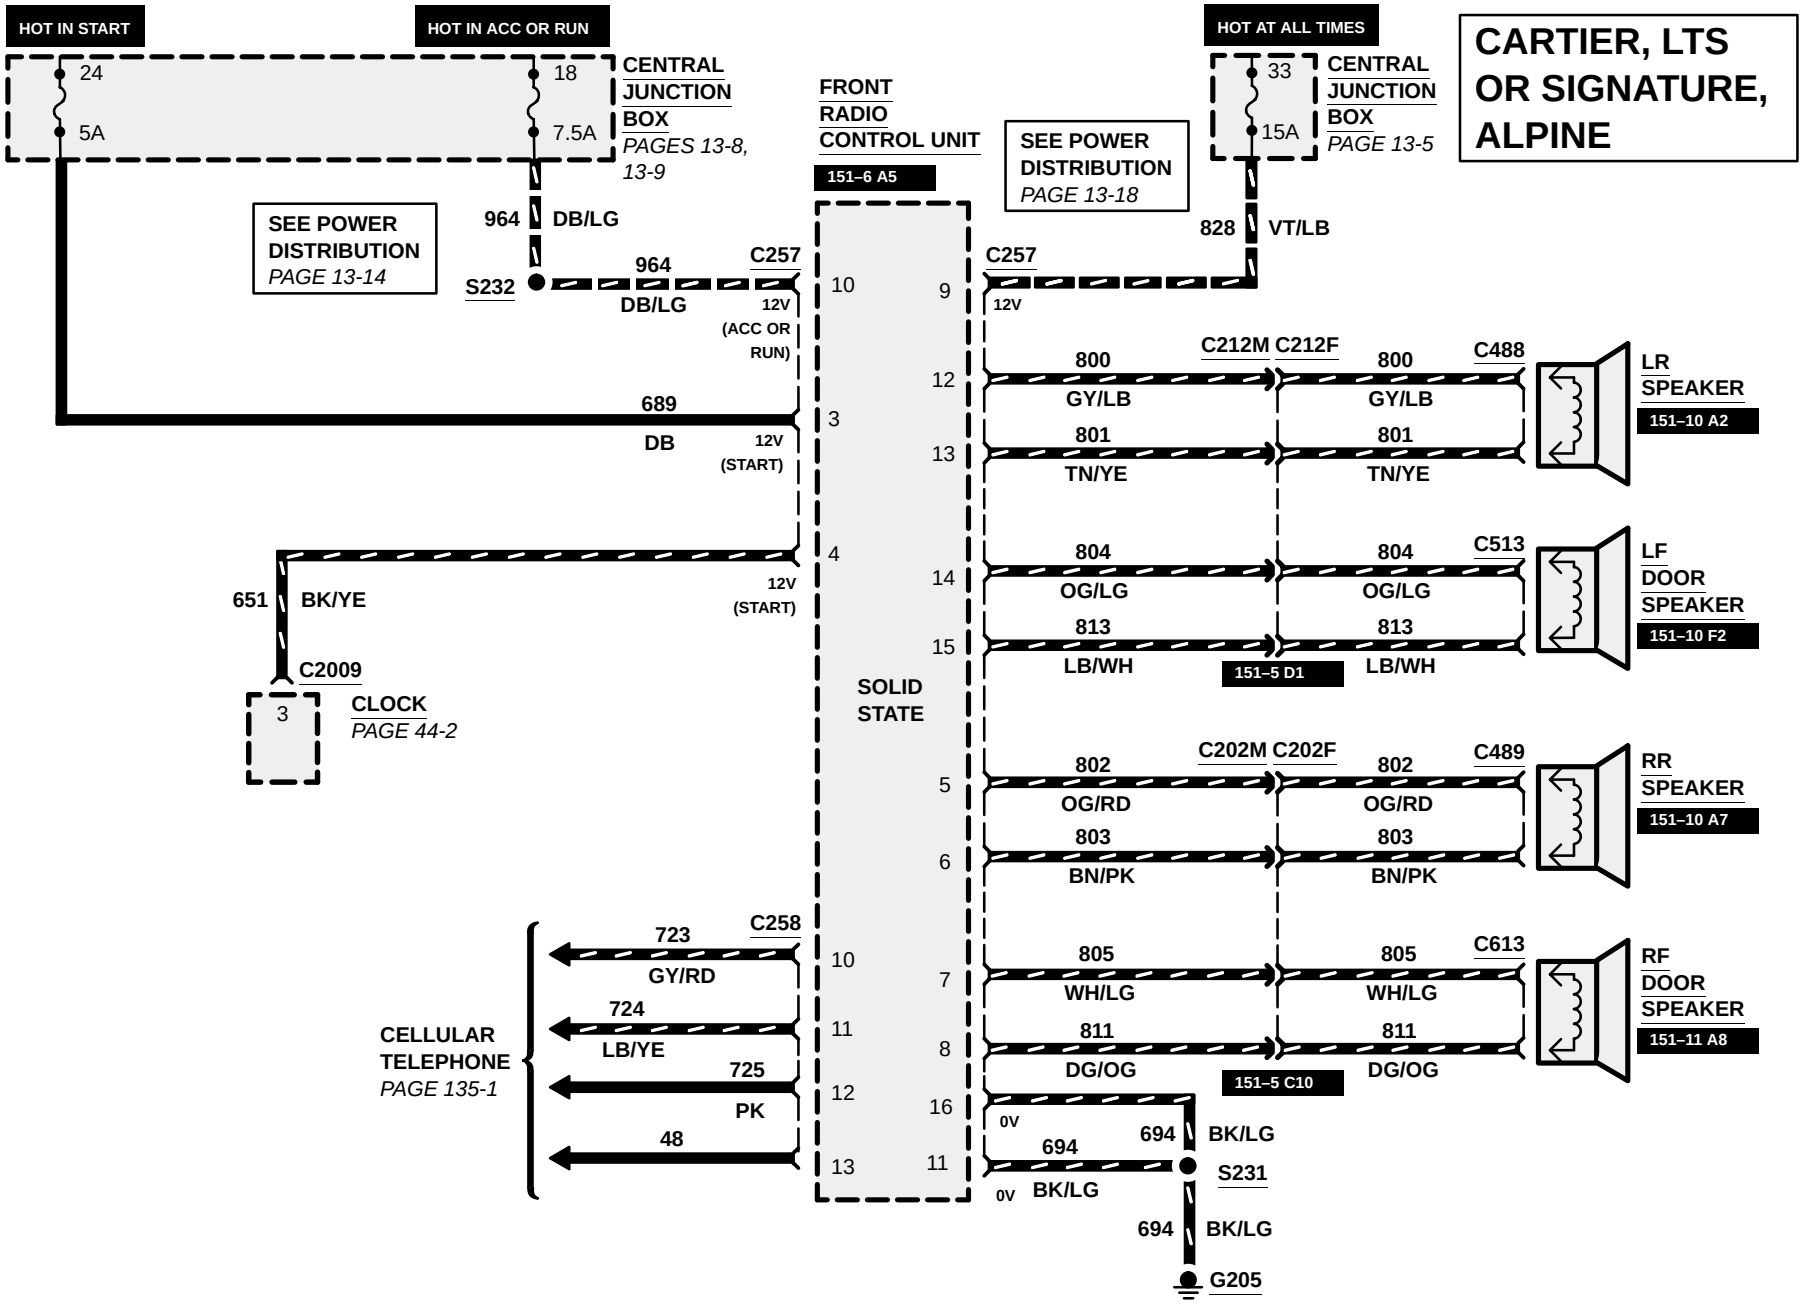
CARTIER, LTS OR SIGNATURE, ALPINE
HOT IN START
HOT IN ACC OR RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGES 13-8, 13-9
24
5A
18
7.5A
33
15A
CENTRAL JUNCTION BOX
PAGE 13-5
SEE POWER DISTRIBUTION
PAGE 13-14
SEE POWER DISTRIBUTION
PAGE 13-18
FRONT RADIO CONTROL UNIT
151–6 A5
964 DB/LG
S232
964 DB/LG
C257
12V (ACC OR RUN)
828 VT/LB
C257
12V
689 DB
12V (START)
651 BK/YE
12V (START)
C2009
3
CLOCK
PAGE 44-2
SOLID STATE
C212M C212F
800 GY/LB
800 GY/LB
C488
LR SPEAKER
151–10 A2
801 TN/YE
801 TN/YE
804 OG/LG
804 OG/LG
C513
LF DOOR SPEAKER
151–10 F2
813 LB/WH
813 LB/WH
151–5 D1
C202M C202F
802 OG/RD
802 OG/RD
C489
RR SPEAKER
151–10 A7
803 BN/PK
803 BN/PK
C258
723 GY/RD
724 LB/YE
725 PK
48
CELLULAR TELEPHONE
PAGE 135-1
805 WH/LG
805 WH/LG
C613
RF DOOR SPEAKER
151–11 A8
811 DG/OG
811 DG/OG
151–5 C10
0V
694 BK/LG
694 BK/LG
S231
0V BK/LG
694 BK/LG
G205