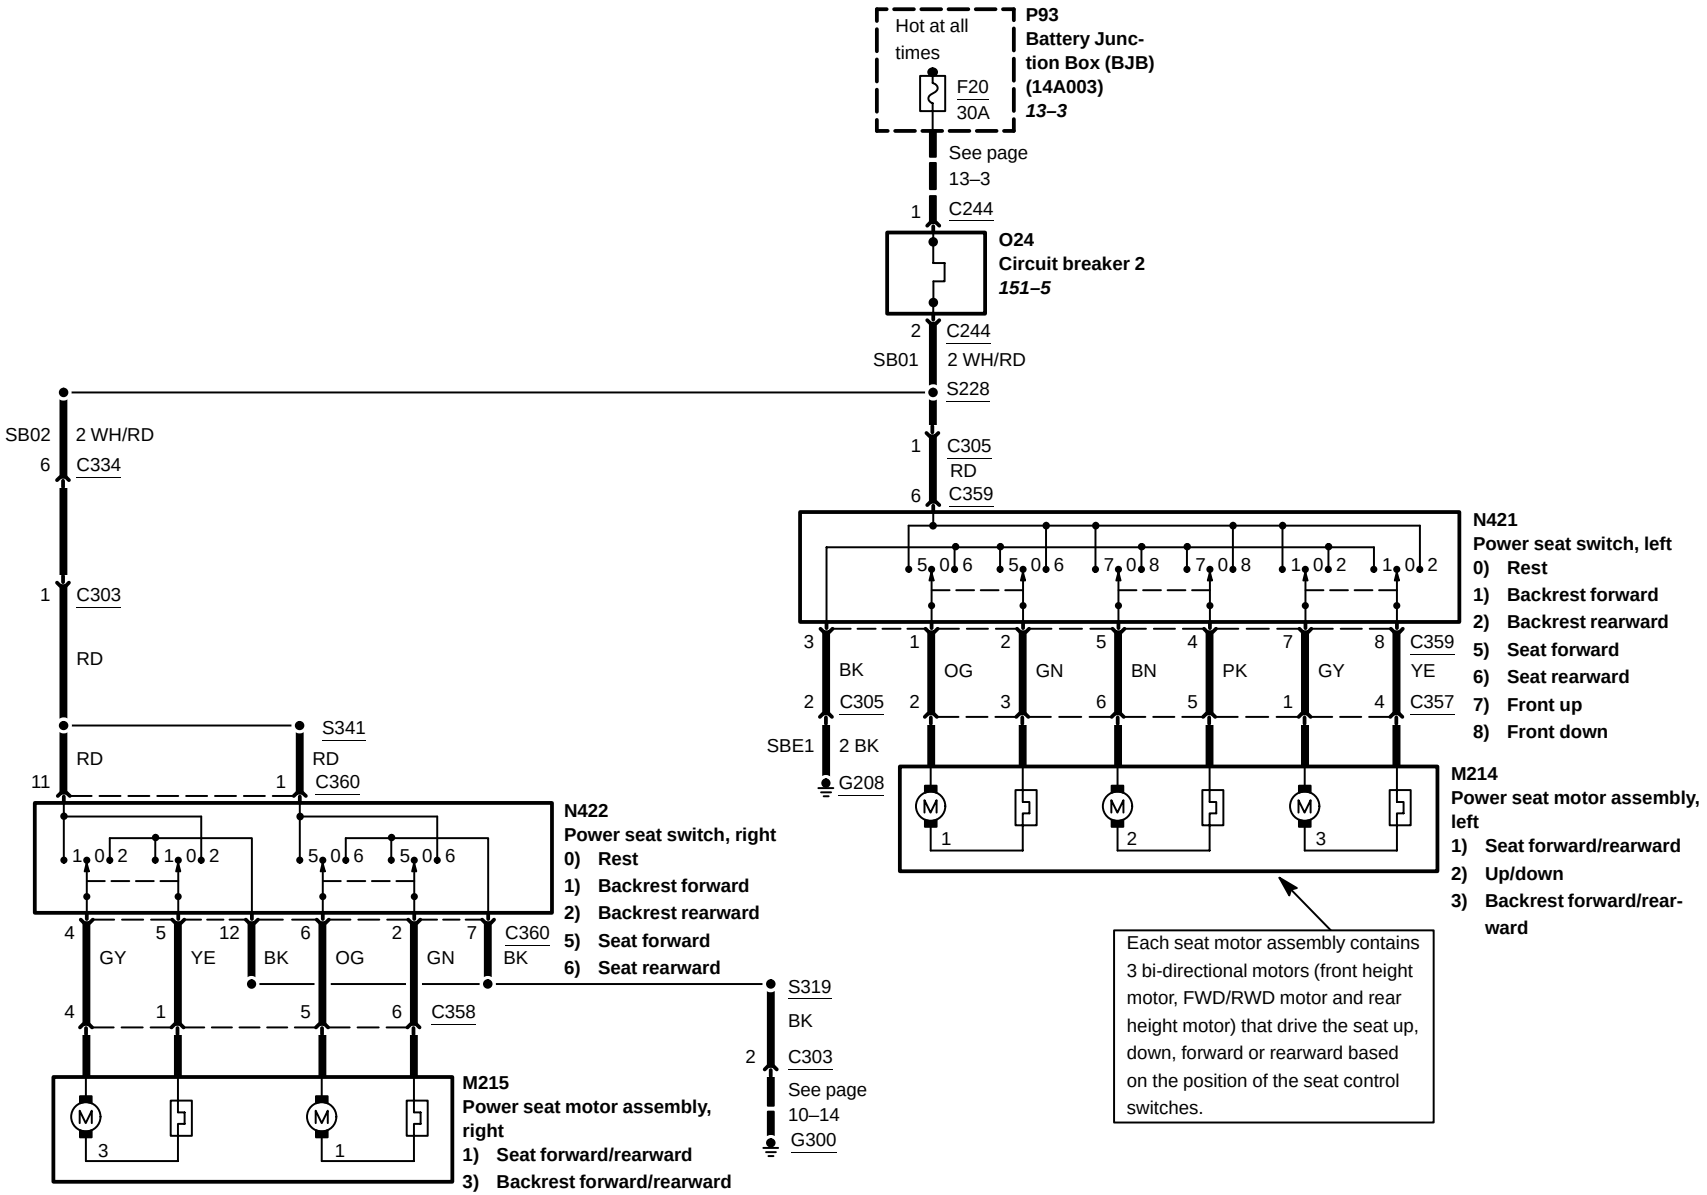
Hot at all times
F20
30A
P93
Battery Junction Box (BJB)
(14A003)
13–3
See page 13–3
1
C244
O24
Circuit breaker 2
151–5
2
C244
SB01
2 WH/RD
S228
1
C305
RD
6
C359
N421
Power seat switch, left
0) Rest
1) Backrest forward
2) Backrest rearward
5) Seat forward
6) Seat rearward
7) Front up
8) Front down
3
BK
2
C305
SBE1
2 BK
G208
1
OG
2
GN
5
BN
4
PK
7
GY
8
C359
YE
C357
M214
Power seat motor assembly, left
1) Seat forward/rearward
2) Up/down
3) Backrest forward/rearward
SB02
2 WH/RD
6
C334
1
C303
RD
S341
RD
11
RD
1
RD
C360
N422
Power seat switch, right
0) Rest
1) Backrest forward
2) Backrest rearward
5) Seat forward
6) Seat rearward
4
GY
5
YE
12
BK
6
OG
2
GN
7
C360
BK
4
1
5
6
C358
S319
BK
2
C303
See page 10–14
G300
M215
Power seat motor assembly, right
1) Seat forward/rearward
3) Backrest forward/rearward
Each seat motor assembly contains 3 bi-directional motors (front height motor, FWD/RWD motor and rear height motor) that drive the seat up, down, forward or rearward based on the position of the seat control switches.