C171

12B637

Heated Oxygen Sensor (HO2S) #11 (9F472)

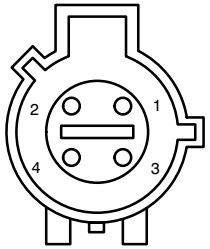

F04124

Pin	Circuit	Circuit function
1	15S-RJ14 (GN/YE)	Voltage supplied in Start and Run (overload protected)
2	91S-RJ14 (BN)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
3	9-RJ14 (BN)	Signal return
4	8-RJ14 (WH)	Heated Oxygen Sensor (HO2S) #11 (9F472), input

C172

12B637

Heated Oxygen Sensor (HO2S) #21 (9F472)

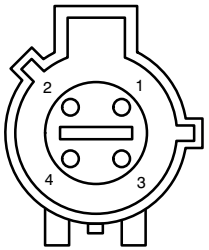

F04124

Pin	Circuit	Circuit function
1	15S-RJ15 (GN/BU)	Voltage supplied in Start and Run (overload protected)
2	91S-RJ15 (BN/RD)	Heated Oxygen Sensor (HO2S) #21 (9F472), heater
3	9-RJ15 (BN/RD)	Signal return
4	8-RJ15 (WH/RD)	Heated Oxygen Sensor (HO2S) #21 (9F472), input

* 3.0L
** 3.9L

C174

12B637

Ignition transformer capacitor 1 (18801)

F01031

Pin	Circuit	Circuit function
1	*15-MD20B (GN/BU)	Voltage supplied in Start and Run (overload protected)
1	**15-MD20A (GN/BU)	Voltage supplied in Start and Run (overload protected)