C523 (BK)

14A005

Speaker, left front (18808)

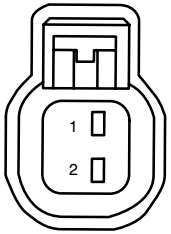

F02555

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –

C524 (GY)

14A005

Power window motor, driver side front (23395)



F02387

Pin	Circuit	Circuit function
1	227 (YE)	Window motor feed, Down
2	226 (WH/BK)	Window motor feed, Up

C525 (WH)

14A005

Door lock actuator, left front

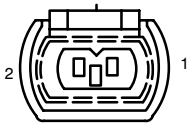

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
	163 (RD/OG)	driver door Unlock, output
2	117 (PK/BK)	Door lock, output

C526a (GY)

14A005

Door ajar switch, driver side front (14018)



F01053

Pin	Circuit	Circuit function
1	867 (DB)	left front door, Open, signal

C526b (BK)

14A005

Door ajar switch, driver side front (14018)

F01067

Pin	Circuit	Circuit function
1	57 (BK)	Ground