-1

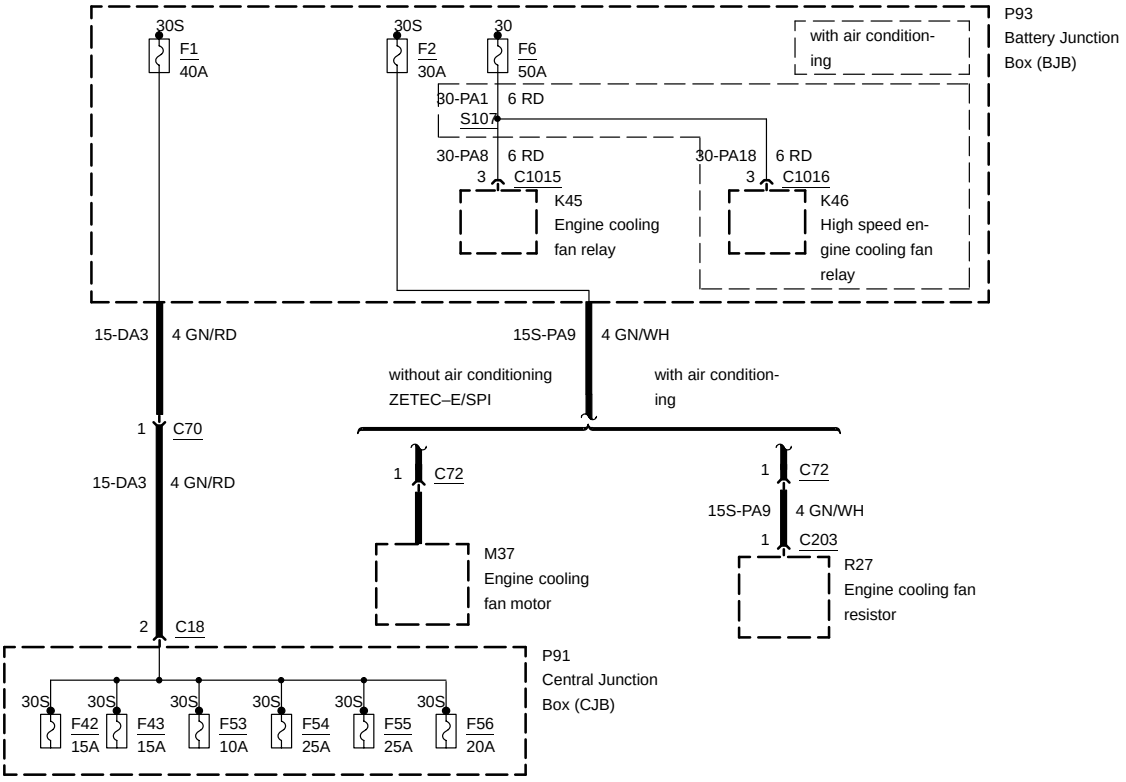
30S
F1
40A
30S
F2
30A
30
F6
50A
with air condition-
ing
P93
Battery Junction
Box (BJB)
30-PA1
6 RD
S107
30-PA8
6 RD
3
C1015
K45
Engine cooling
fan relay
30-PA18
6 RD
3
C1016
K46
High speed en-
gine cooling fan
relay
15-DA3
4 GN/RD
15S-PA9
4 GN/WH
without air conditioning
ZETEC–E/SPI
with air condition-
ing
1
C70
15-DA3
4 GN/RD
1
C72
M37
Engine cooling
fan motor
1
C72
15S-PA9
4 GN/WH
1
C203
R27
Engine cooling fan
resistor
2
C18
P91
Central Junction
Box (CJB)
30S
F42
15A
30S
F43
15A
30S
F53
10A
30S
F54
25A
30S
F55
25A
30S
F56
20A