C3049

14A699

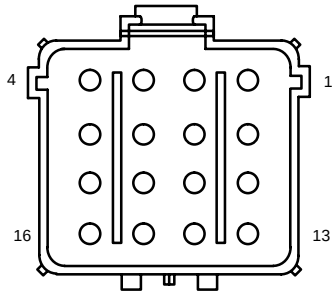

F16034

14A005

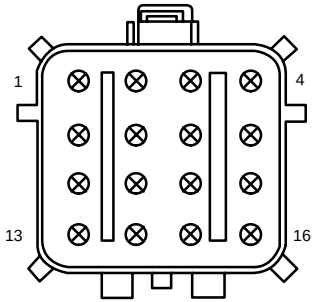

F16141

(1) 676 (PK/OG)
(2) 57 (BK)
(3) 1558 (TN/BK)
(4) 1557 (DB/OG)
(5) 964 (DB/LG)
(6) 919 (GY/BK)
(7) 1514 (RD/BK)
(8) 1556 (DG/VT)
(9) 918 (GY)
(10) 1048 (LB/WH)
(11) 581 (RD)
(12) 580 (BN)
(13) 517 (BK/WH)
(14) 298 (VT/OG)
(15) 1256 (WH/YE)
(16) 579 (BK/OG)

C3065 (NA)

14A699

Safety belt buckle switch, driver

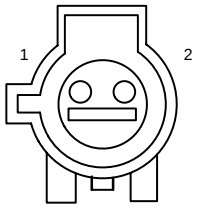

F02489

Pin	Circuit	Circuit function
1	85 (BN/LB)	Safety belt buckle switch, driver, feed
2	1558 (TN/BK)	Seat track position sensor, left, return

C3066 (NA)

14A699

Safety belt buckle switch, passenger

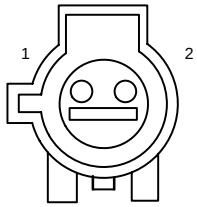

F02489

Pin	Circuit	Circuit function
1	1514 (RD/BK)	Safety belt buckle switch, passenger, feed
2	1558 (TN/BK)	Seat track position sensor, left, return

C3127 (BK)

14405

Fuel pump module

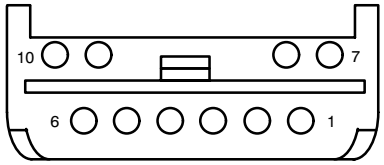

F10009

Pin	Circuit	Circuit function
1	926 (LB/OG)	Powertrain Control Module (PCM) (12A650) to Fuel pump, control
2	57 (BK)	Ground
3	789 (BN/WH)	Fuel pump, Power, return
4	–	not used
5	–	not used
6	–	not used
7	238 (DG/YE)	Powertrain Control Module (PCM) (12A650) to Fuel pump, monitor
8	–	not used
9	866 (WH)	Fuel pump module, Power, feed
10	787 (PK/BK)	Fuel pump, Power, feed