Headlamp switch, Interior lamps

Schematic

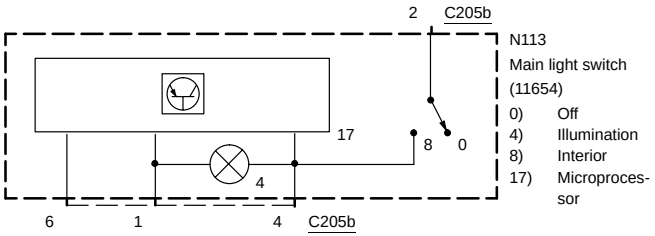

Terminals

C205b

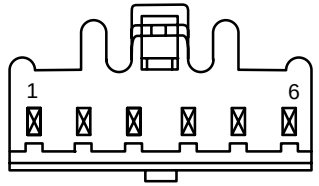

F06209

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Interior lamp	2 and 4	On	Open circuit
		Off	Closed circuit