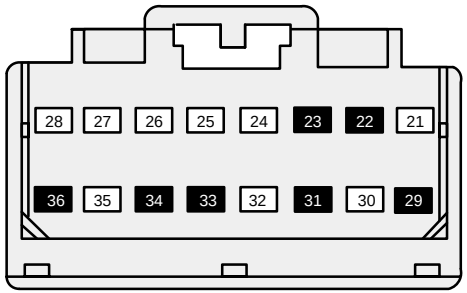

C255

VIRTUAL IMAGE INSTRUMENT CLUSTER

PIN	CIRCUIT	CIRCUIT FUNCTION
21	640 (RD/YE)	Power (Start or Run)
22	–	NOT USED
23	–	NOT USED
24	31 (WH/RD)	Indicator to Engine Oil Pressure Sending Unit
25	977 (VT/WH)	Brake Fluid Level Switch/Parking Brake Input
26	57 (BK)	Ground
27	875 (BK/LB)	Logic Ground
28	563 (OG/YE)	Fuel Level Signal **REVISED**
29	–	NOT USED
30	608 (BK/YE)	Indicator to Air Bag Electronic Crash Sensor (ECS)
31	–	NOT USED
32	3 (LG/WH)	LF Turn Signal Lamp Input
33	–	NOT USED
34	–	NOT USED
35	2 (WH/LB)	RF Turn Signal Lamp Input
36	–	NOT USED

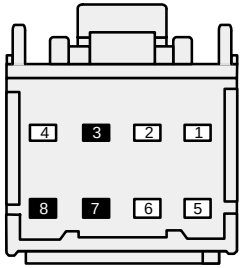

C266

MESSAGE CENTER SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	19 (LB/RD)	Instrument Illumination
2	676 (PK/OG)	Message Center Switch Return
3	–	NOT USED
4	715 (LG)	Message Center Switch 1
5	143 (LB/YE)	Message Center Switch 2
6	57 (BK)	Ground
7	–	NOT USED
8	–	NOT USED

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C154	12-2
C228	112-3
C236	13-21
C327	46-3
C415	23-16
C927	118-2
C1032	23-13