C420c

14A005

A212
Rear Electronic
Module (REM)

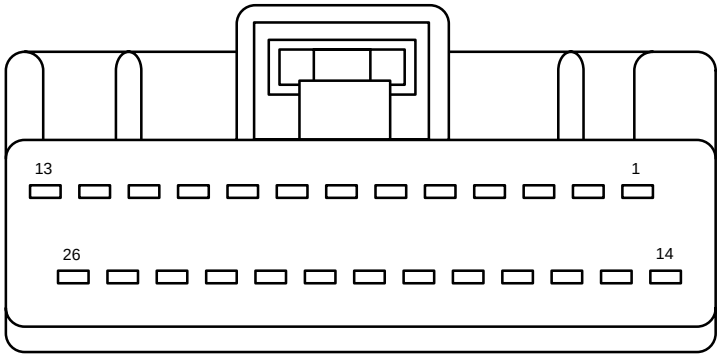

F26018

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	33-AA15 (YE/GN)	Switched between: Battery voltage, Ground or Open
5	33-AA2 (YE/RD)	Switched between: Battery voltage, Ground or Open
6	32-AA1 (WH)	Switched between: Battery voltage, Ground or Open
7	32-AA16 (WH/BK)	Switched between: Battery voltage, Ground or Open
8	–	not used
9	–	not used
10	29S-AA83 (OG)	Voltage supplied at all times (overload protected), Switched
11	31-DK30D (BK/OG)	Ground
12	31-DK30E (BK/OG)	Ground
13	29S-DK31 (OG/BK)	Voltage supplied at all times (overload protected), Switched
14	5-AG12 (BU/BK)	Data link, bus negative

Pin	Circuit	Circuit function
15	4-AG12 (GY/OG)	Data link, bus positive
16	31S-GL12 (BK/OG)	Ground, Switched
17	–	not used
18	–	not used
19	8-RE32 (WH/VT)	Sensor signal
20	8-AA20 (WH/BU)	Sensor signal
21	8-AA21 (WH/GN)	Sensor signal
22	10-AJ14 (GY/VT)	Signal 2 (Y–direction, reverse, downward)
23	9-GA1 (BN)	Sensor signal return (reference/ground)
24	8-AJ14 (WH/BU)	Sensor signal
25	31-DK30F (BK/OG)	Ground
26	31-DK30G (BK/OG)	Ground