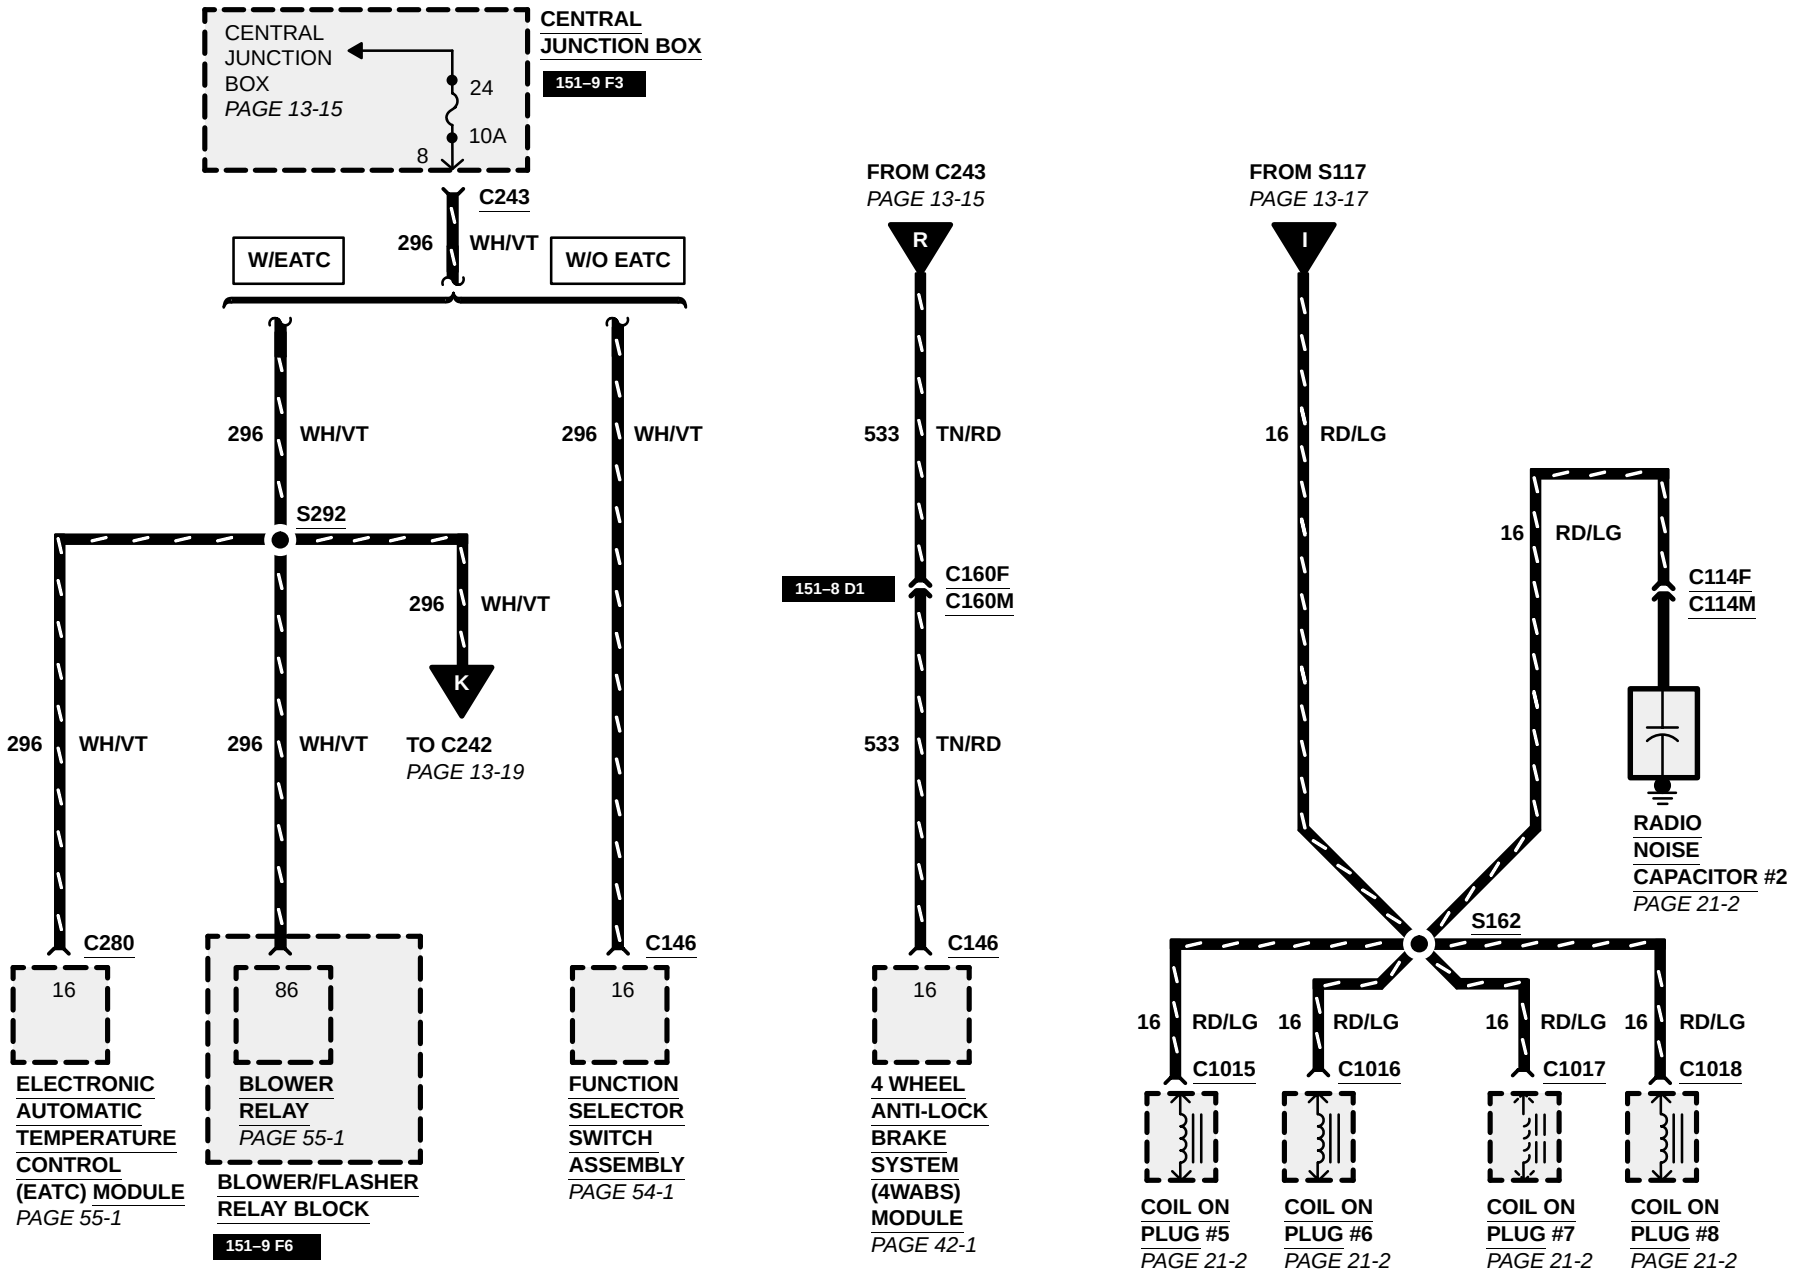
CENTRAL JUNCTION BOX PAGE 13-15
24
10A
8
CENTRAL JUNCTION BOX
151–9 F3
C243
296 WH/VT
W/EATC
W/O EATC
296 WH/VT
296 WH/VT
S292
296 WH/VT
K
TO C242
PAGE 13-19
296 WH/VT
296 WH/VT
C280
16
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL (EATC) MODULE
PAGE 55-1
86
BLOWER RELAY
PAGE 55-1
BLOWER/FLASHER RELAY BLOCK
151–9 F6
C146
16
FUNCTION SELECTOR SWITCH ASSEMBLY
PAGE 54-1
FROM C243
PAGE 13-15
R
533 TN/RD
151–8 D1
C160F
C160M
533 TN/RD
C146
16
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-1
FROM S117
PAGE 13-17
I
16 RD/LG
16 RD/LG
C114F
C114M
RADIO NOISE CAPACITOR #2
PAGE 21-2
S162
16 RD/LG
C1015
16 RD/LG
C1016
16 RD/LG
C1017
16 RD/LG
C1018
COIL ON PLUG #5
PAGE 21-2
COIL ON PLUG #6
PAGE 21-2
COIL ON PLUG #7
PAGE 21-2
COIL ON PLUG #8
PAGE 21-2