Window adjust switch, right rear (14A412)

Schematic

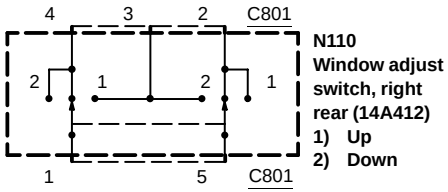

Terminals

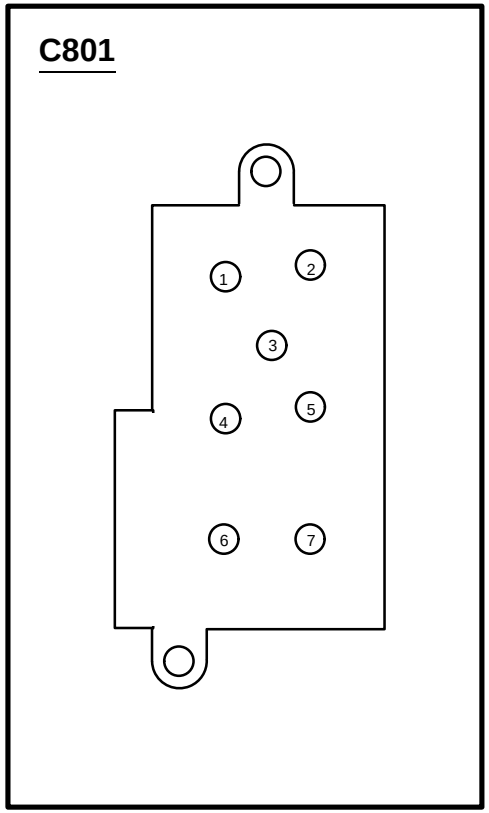

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Power windows Up Circuit	3 and 1	Up	Closed circuit
	5 and 2	Up	Closed circuit
Power windows Down Circuit	3 and 5	Down	Closed circuit
	1 and 4	Down	Closed circuit
Master window control switch	4 and 1	Rest	Closed circuit
	2 and 5	Rest	Closed circuit