C715b (BK)

14A005

Door ajar switch, driver side rear (14018)

F01067

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C800

14632



F02387

(1) 333 (YE/RD)
(2) 334 (RD/YE)

14A005



F02387

C801 (BU)

14A005

Window adjust switch, right rear (14A412)

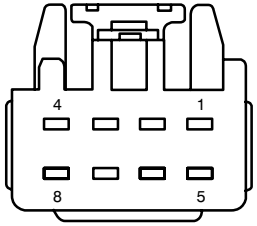

F08289

Pin	Circuit	Circuit function
1	–	not used
2	333 (YE/RD)	Window motor, feed, Up
3	320 (RD/BK)	Window switch, feed, right rear, Down
4	170 (RD/LB)	Window lockout, switched power, output
5	319 (YE/BK)	Window switch, feed, right rear, Up
6	334 (RD/YE)	Window motor, feed, Down
7	–	not used
8	–	not used

C803 (GY)

14A005

Power window motor, right rear (23394)



F02387

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, Up
2	334 (RD/YE)	Window motor, feed, Down