Excursion

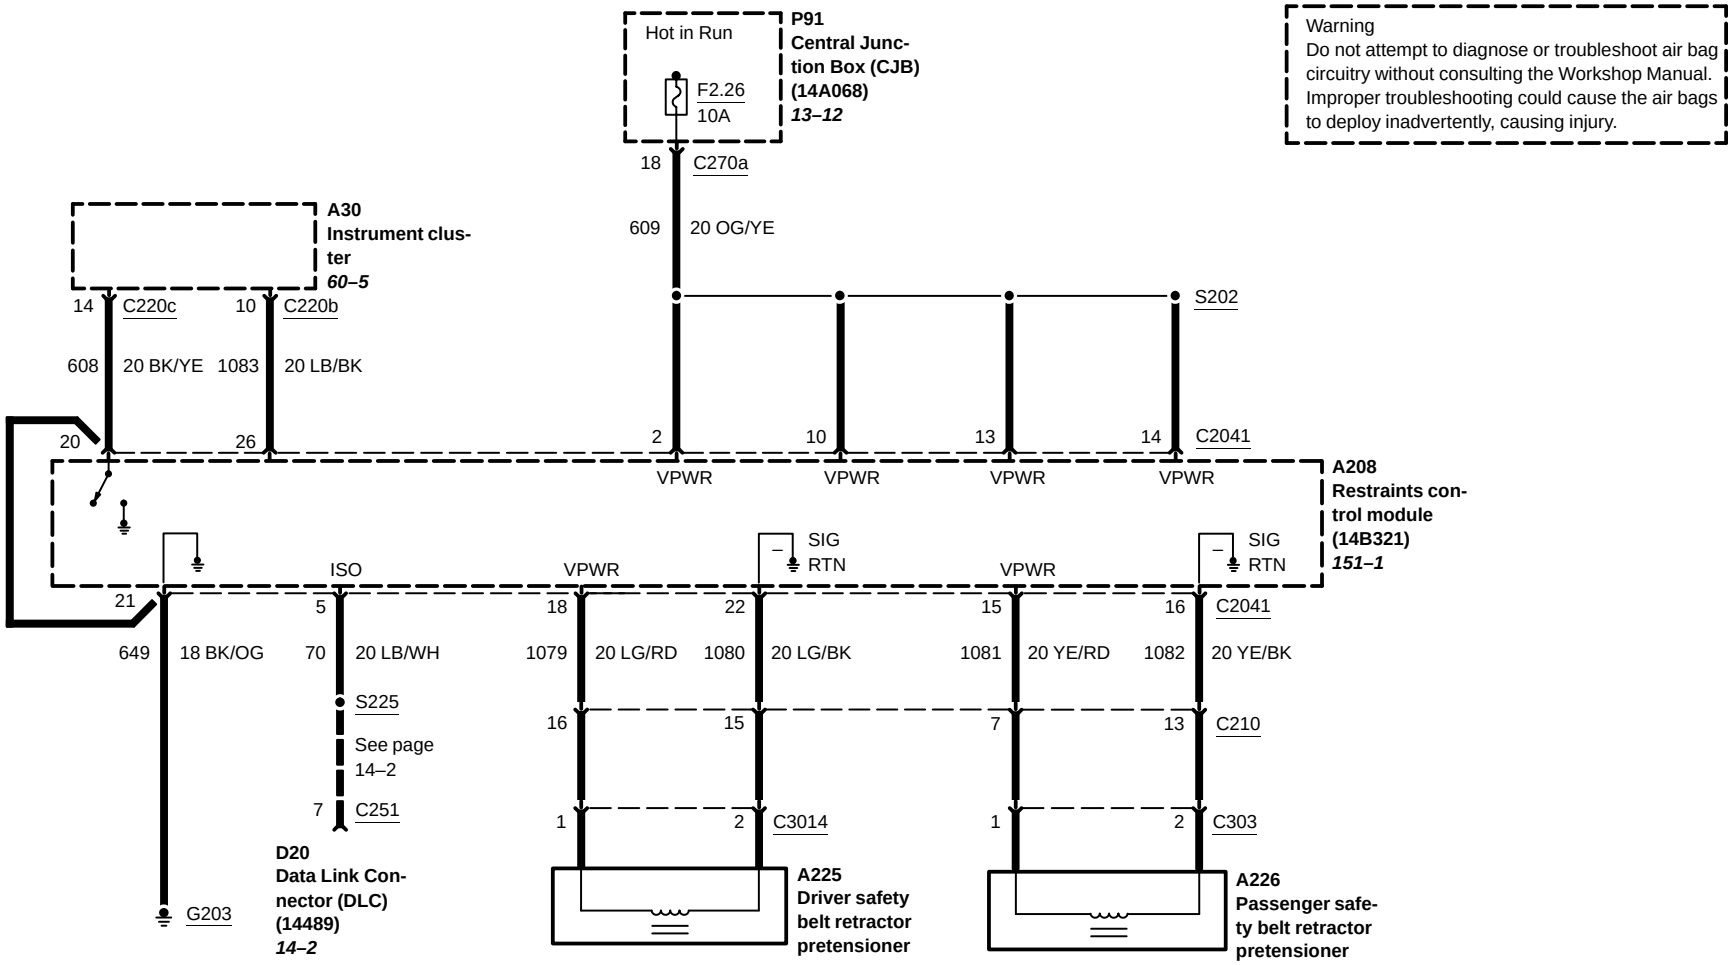
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Hot in Run
P91
Central Junction Box (CJB)
(14A068)
13–12
F2.26
10A
18
C270a
609
20 OG/YE
A30
Instrument cluster
60–5
14
C220c
10
C220b
608
20 BK/YE
1083
20 LB/BK
S202
20
26
2
10
13
14
C2041
VPWR
VPWR
VPWR
VPWR
A208
Restraints control module
(14B321)
151–1
ISO
VPWR
SIG RTN
VPWR
SIG RTN
21
5
18
22
15
16
C2041
649
18 BK/OG
70
20 LB/WH
1079
20 LG/RD
1080
20 LG/BK
1081
20 YE/RD
1082
20 YE/BK
S225
See page 14–2
16
15
7
13
C210
7
C251
1
2
C3014
1
2
C303
D20
Data Link Connector (DLC)
(14489)
14–2
G203
A225
Driver safety belt retractor pretensioner
A226
Passenger safety belt retractor pretensioner