except, Late production, Expedition

C4014a (BK)

13A409

Parking Aid Module
(PAM) (15T850)

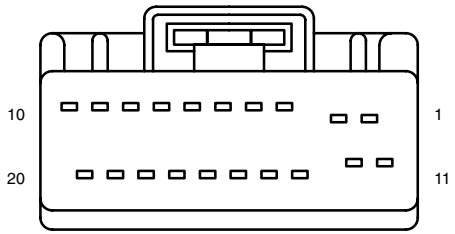

F20045

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Ultrasonic sensor, Ground
4	1960 (PK/YE)	Parking aid radar sensor, Ground
5	–	not used
6	1441 (WH/LG)	Parking aid ultrasonic sensor, left, signal
7	1444 (DB/YE)	Parking aid ultrasonic sensor, right, signal
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Ultrasonic sensor, Power
14	1959 (RD/WH)	Parking aid radar sensor, Power
15	–	not used
16	1443 (WH/LB)	Parking aid radar sensor, signal
17	–	not used
18	–	not used
19	–	not used
20	–	not used

except, Late production, Expedition

C4014b (BK)

13A409

Parking Aid Module
(PAM) (15T850)

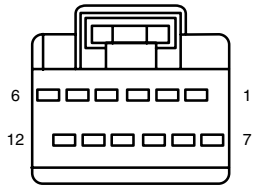

F12077

Pin	Circuit	Circuit function
1	1906 (VT)	UBP Bus
2	–	not used
3	689 (DB)	Parking aid, mute, signal
4	–	not used
5	–	not used
6	–	not used
7	875 (BK/LB)	Ground
8	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
9	–	not used
10	–	not used
11	–	not used
12	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)

Late production

C4015 (WH)

13A409

Parking aid speaker

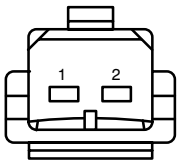

F02233

Pin	Circuit	Circuit function
1	1438 (DG)	Parking Aid Module (PAM) (15K866), to, Parking aid speaker (+)
2	1437 (BK/PK)	Parking Aid Module (PAM) (15K866), to, Parking aid speaker (–)