C2156

14401

A19
Warning buzzer/
chime module

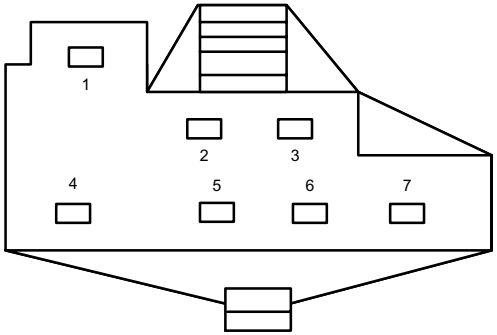

Pin	Circuit	Circuit function
1	14 (BN)	Power, Exterior lamps
2	159 (RD/PK)	Door ajar switch, left front, signal
3	85 (BN/LB)	Safety belt buckle switch (10B924), input
4	158 (BK/PK)	Key warning switch (11A127), input
5	57 (BK)	Ground
6	112 (BK/YE)	Safety belt indicator, control
7	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)

C2157

14401

A52
Wiper Control Mod-
ule (WCM)

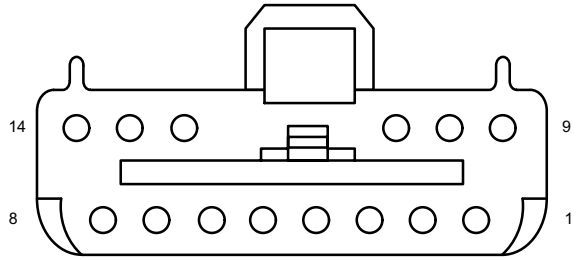

Pin	Circuit	Circuit function
1	589 (OG)	Wiper/washer switch, wiper speed circuit
2	65 (DG)	Voltage in Run or Accessory (overload protected)
3	57 (BK)	Ground
4	941 (BK/WH)	Windshield washer pump motor (17618), feed
5	57 (BK)	Ground
6	–	not used
7	993 (BN/WH)	Wiper Control Module (WCM), feed, to, Wiper/washer switch
8	56 (DB/OG)	Wiper Control Module (WCM), output, Low
9	590 (DB/WH)	Wiper/washer switch, Intermittent wiper circuit
10	61 (YE/RD)	Ground
11	65 (DG)	Voltage in Run or Accessory (overload protected)
12	–	not used
13	28 (BK/PK)	wiper park position signal
14	58 (WH)	Wiper Control Module (WCM), output, High