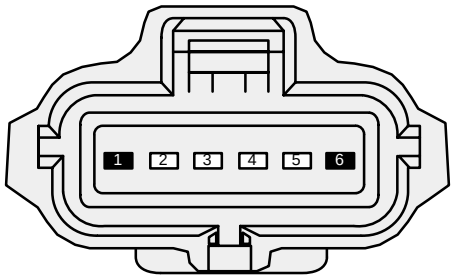

C197
MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	361 (RD)	Power (Hot in Start or Run)
3	969 (BK)	MAF Ground
4	968 (TN/LB)	MAF Return
5	967 (LB/RD)	PCM to MAF Sensor
6	–	NOT USED

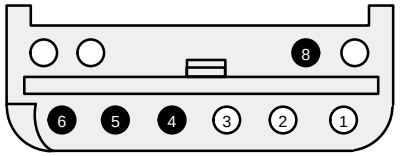

C451 (GRAY)
FUEL PUMP DRIVER MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	922 (WH/RD)	Module to PCM
2	1205 (BK)	Ground
3	366 (RD/BK)	Fuel Pump Return
4	–	NOT USED
5	–	NOT USED
6	–	NOT USED
7	928 (LB/OG)	Module to PCM
8	–	NOT USED
9	787 (PK/BK)	Module Power
10	513 (BN/PK)	Fuel Pump Power

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C232	14-3
C251	60-3