C1188

12A581

K353
Trailer tow relay, left turn

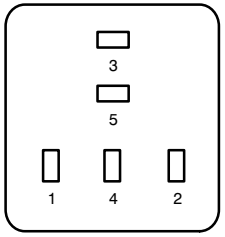

F05139

Pin	Circuit	Circuit function
1	9 (LG/OG)	Relay, control
2	57 (BK)	Ground
3	1362 (DG/OG)	Voltage supplied at all times (overload protected)
4	–	not used
5	52 (YE)	Trailer lamp socket, Turn signal

C1189

12B637

B8
Throttle Position Sensor (TPS)
(9B989)

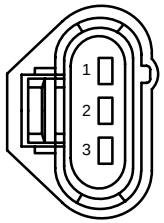

F03175

Pin	Circuit	Circuit function
1	351 (BN/WH)	Reference voltage
2	355 (GY/WH)	position sense
3	359 (GY/RD)	Sensor signal return (reference/ground)

C1195

12A581

P133
Vapor management valve

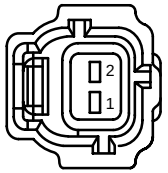

F02105

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	191 (LG/BK)	Powertrain Control Module (PCM) (12A650), EVAP canister purge valve

C1204

12B637

Y240
Fuel injector 9 (9F593)

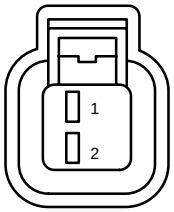

F02069

Pin	Circuit	Circuit function
1	1100 (GY/BK)	control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1205

12B637

Y241
Fuel injector 10 (9F593)

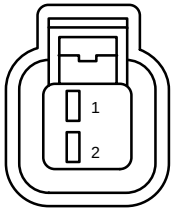

F02069

Pin	Circuit	Circuit function
1	1101 (GY/RD)	control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)