C466b (GY)

Subwoofer amplifier
(18C804)

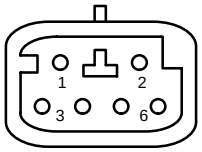

F06321

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	BK	Subwoofer –
4	BK/WH	Subwoofer +
5	BK	Subwoofer –
6	BK/WH	Subwoofer +

C467 (BK)

18C673

Rear window wiper
disable switch

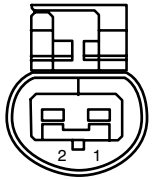

F02523

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	700 (WH/VT)	Liftgate ajar switch

C474 (BN)

14A435

Power point, rear
(19G247)

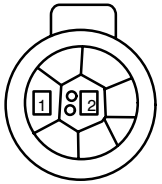

F02621

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	687 (GY/YE)	Voltage supplied at all times (overload protected)

* Sport Trac

C504a (BU)

14631

Master window ad-
just switch (14529)

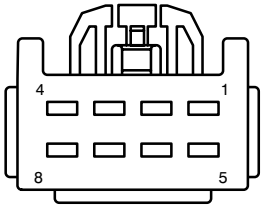

F08167

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	314 (TN/LB)	Window switch, feed, right front, Down
	*320 (RD/BK)	Window switch, feed, right rear, Down
3	313 (WH/YE)	Window switch, feed, right front, Up
	*314 (TN/LB)	Window switch, feed, right front, Down
4	400 (LB/BK)	Window safety relay, switched power, output
	*313 (WH/YE)	Window switch, feed, right front, Up
5	–	not used
6	992 (WH/BK)	Master window adjust switch (14529), feed, Up
7	992 (WH/BK)	Master window adjust switch (14529), feed, Up
	*991 (TN/LB)	Master window adjust switch (14529), feed, Down
8	991 (TN/LB)	Master window adjust switch (14529), feed, Down