C927

14A005

E237
Cargo lamp assembly



F03197

Pin	Circuit	Circuit Function
1	55 (BK/PK)	Cargo lamp, output
2	511 (LG)	Brake pedal position switch, to stoplamps
3	57 (BK)	Ground

C930

14334

A143
Overhead console

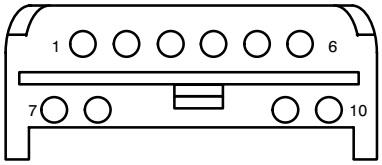

F10009

Pin	Circuit	Circuit Function
1	–	not used
2	57 (BK)	Ground
3	1003 (GY/YE)	Voltage in Run (overload protected)
4	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
5	705 (LG/OG)	Battery saver relay, switched power
6	53 (BK/LB)	Interior lamp relay, switched power, output
7	–	not used
8	235 (RD/BK)	Instrument illumination, input
9	233 (DB/YE)	Ambient air temperature sensor, feed
10	234 (DB/WH)	Ambient air temperature sensor, return

C931a

14334

E238
Interior/map lamps assembly, front

F01017

Pin	Circuit	Circuit Function
1	53 (BK/LB)	Interior lamp relay, switched power, output

C931b (GY)

14334

E238
Interior/map lamps assembly, front

F01017

Pin	Circuit	Circuit Function
1	705 (LG/OG)	Battery saver relay, switched power

C932a

14335

E239
Interior/map lamps assembly, rear

F01017

Pin	Circuit	Circuit Function
1	53 (BK/LB)	Interior lamp relay, switched power, output

C932b (GY)

14335

E239
Interior/map lamps assembly, rear

F01017

Pin	Circuit	Circuit Function
1	705 (LG/OG)	Battery saver relay, switched power