## C527

**14631**

N409
Exterior rear view mirror switch (17B676)

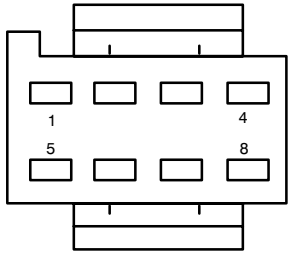


F08056

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 51 (BK/WH) | Voltage supplied at all times (overload protected) |
| 2 | – | not used |
| 3 | 940 (DB/OG) | Left mirror, Mirror motor, Up/Down mirror movement |
| 4 | 942 (RD/OG) | Left mirror, Right/Left mirror movement, position, Sensor |
| 5 | 875 (BK/LB) | Ground |
| 6 | 945 (YE/BK) | Mirror motor, feed |
| 7 | 943 (VT/OG) | Right mirror, Mirror motor, Up/Down mirror movement |
| 8 | 944 (DG/OG) | Right mirror, Right/Left mirror movement |

## C530

**14A005**

A244
Key pad switch assembly (14A626)

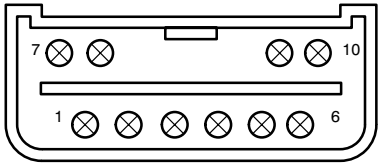


F10025

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 123 (RD) | Key pad button 9/0, output |
| 2 | 122 (YE) | Key pad button 7/8, output |
| 3 | 121 (YE/BK) | Key pad button 5/6, output |
| 4 | 79 (LG/RD) | Key pad button 3/4, output |
| 5 | 78 (LB/YE) | Key pad button 1/2, output |
| 6 | 51 (BK/WH) | Voltage supplied at all times (overload protected) |
| 7 | – | not used |
| 8 | – | not used |
| 9 | 66 (LB) | Key pad illumination |
| 10 | 51 (BK/WH) | Voltage supplied at all times (overload protected) |

## C534

**14631**

N434
Luggage compartment lid release switch

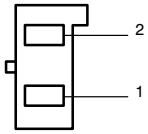


F02185

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 875 (BK/LB) | Ground |
| 2 | 651 (BK/YE) | Driver Door Module |