## C4060

### 14A227

N491
Tonneau cover safety strip, left
(14B457)




F02062

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1626 (LG/RD) | Safety pinch switch, signal |
| 2 | 1627 (BK/OG) | Safety pinch switch, return |

## C4073

### 14N139

E257
Redundant reversing lamp, right
(13500)

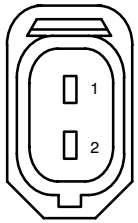


F02108

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 140 (BK/PK) | Voltage supplied in reverse |
| 2 | 57 (BK) | Ground |

## C4061

### 14086

N481
Cargo door ajar switch

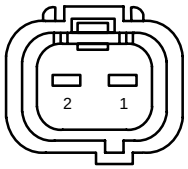


F02511

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 1630 (BN/YE) | from, Tonneau cover control module (14B450) |

## C4156

### 14086

N647
Cargo door ajar switch 2

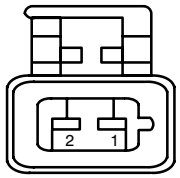


F02379

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1351 (TN) | from, Tonneau cover control module (14B450) |
| 2 | 57 (BK) | Ground |

## C4072

### 14N139

E256
Redundant reversing lamp, left
(13501)

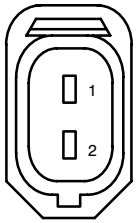


F02108

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 140 (BK/PK) | Voltage supplied in reverse |
| 2 | 57 (BK) | Ground |