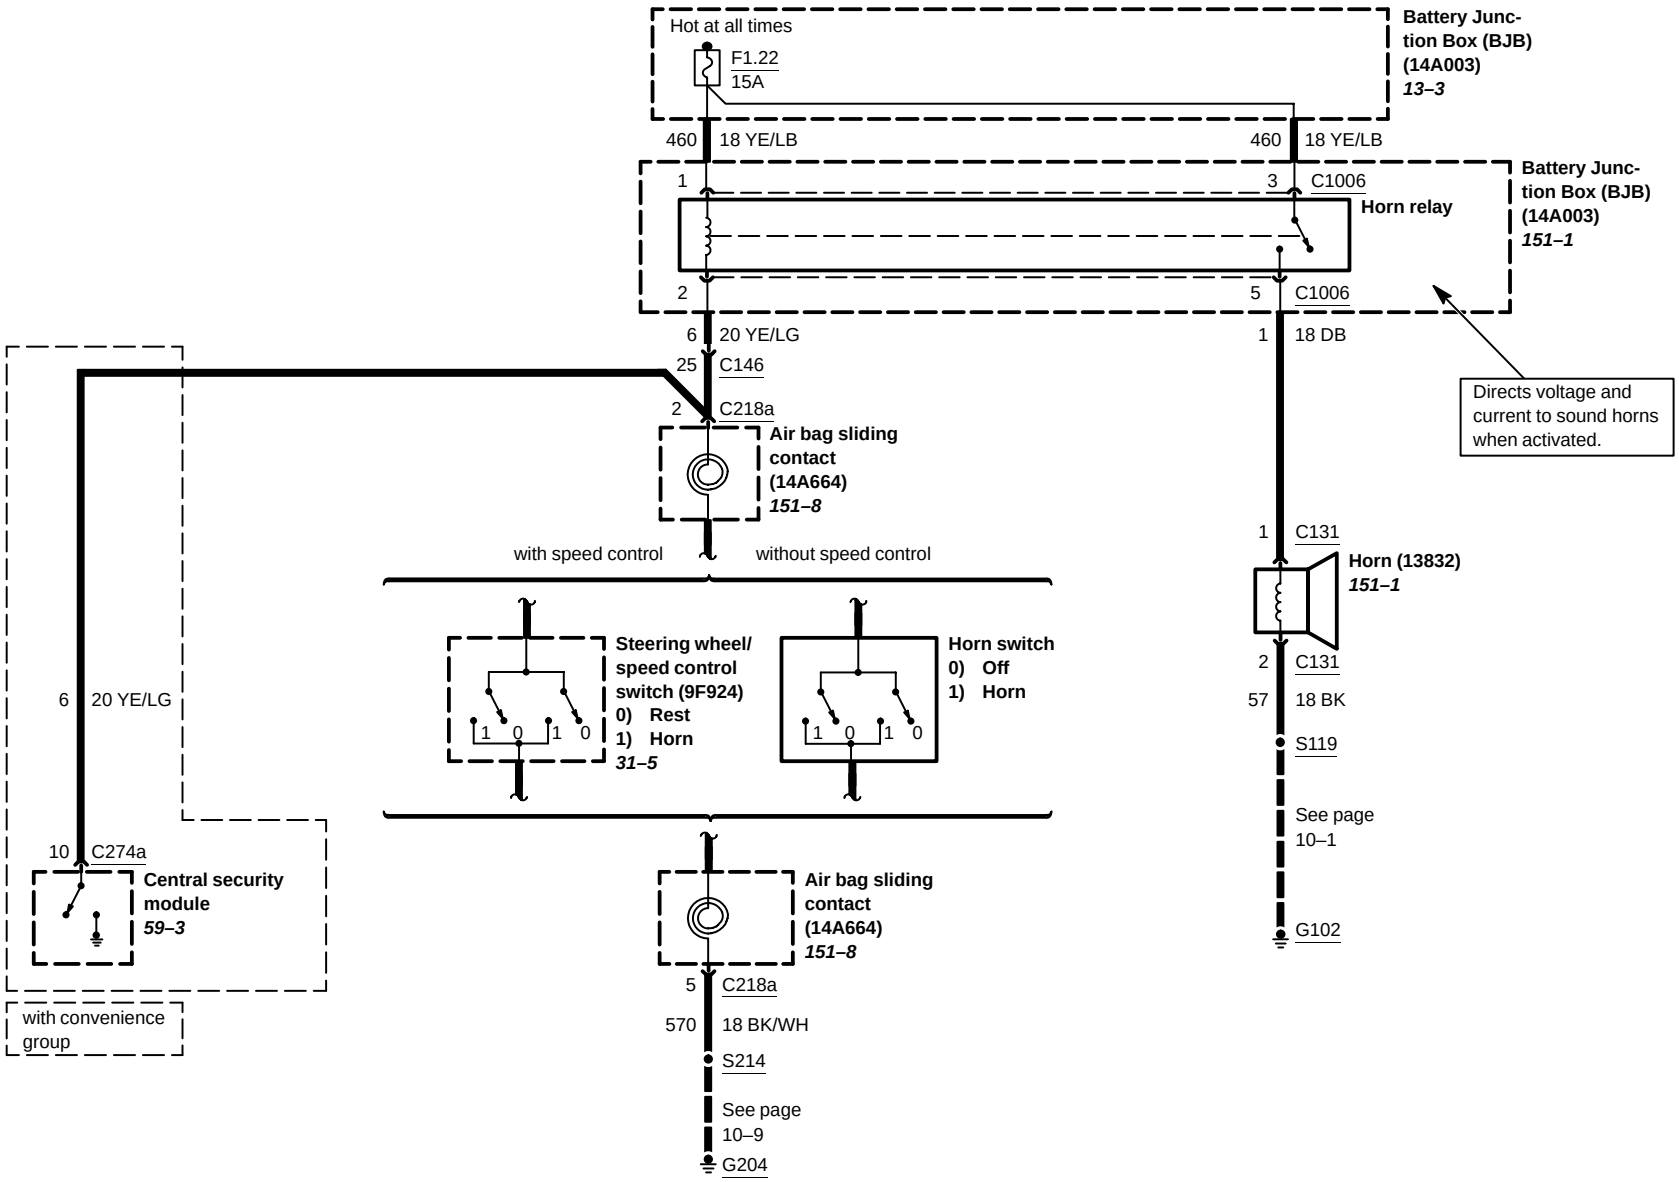
Hot at all times
F1.22
15A
Battery Junction Box (BJB) (14A003) 13–3
460 18 YE/LB
460 18 YE/LB
1
3 C1006
Horn relay
Battery Junction Box (BJB) (14A003) 151–1
2
5 C1006
6 20 YE/LG
1 18 DB
25 C146
2 C218a
Air bag sliding contact (14A664) 151–8
Directs voltage and current to sound horns when activated.
1 C131
Horn (13832) 151–1
with speed control
without speed control
Steering wheel/ speed control switch (9F924)
0) Rest
1) Horn
31–5
Horn switch
0) Off
1) Horn
2 C131
57 18 BK
S119
See page 10–1
6 20 YE/LG
10 C274a
Central security module 59–3
with convenience group
Air bag sliding contact (14A664) 151–8
5 C218a
570 18 BK/WH
S214
See page 10–9
G204
G102