C942 (GY)

14335

Rail lamp, RH side (13776)



F03239

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power, output
3	705 (LG/OG)	Battery saver relay, output

C949 (GY)

14335

DVD player

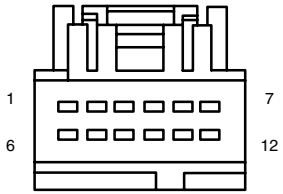

F12139

Pin	Circuit	Circuit function
1	720 (RD/YE)	Voltage supplied at all times (overload protected)
2	1068 (LG/BK)	Audio System ON (ASYSON)
3	19 (LB/RD)	Illumination, Power
4	48 (BK)	Shield
5	1803 (WH)	DVD player, signal, Left, +
6	1805 (RD)	DVD player, signal, Right, +
7	832 (LB/PK)	Audio corporate protocol A
8	833 (TN)	Audio corporate protocol B
9	57 (BK)	Ground
10	694 (BK/LG)	Ground
11	1804 (LG)	DVD player, signal, Left, –
12	1806 (BK)	DVD player, signal, Right, –

* with center console

C989a (GY)

14335

Auxiliary function selector switch assembly, front

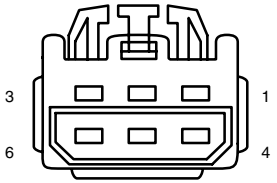

F06229

Pin	Circuit	Circuit function
1	*1120 (BK/WH)	Auxiliary function selector switch assembly, rear, Enable
	756 (RD/PK)	Auxiliary blower motor (19805), Low
2	269 (LB/OG)	Auxiliary blower motor (19805), medium low
3	–	not used
4	751 (DB/WH)	Auxiliary blower motor (19805), medium high
5	515 (OG/RD)	Auxiliary blower motor (19805), speed control
6	57 (BK)	Ground