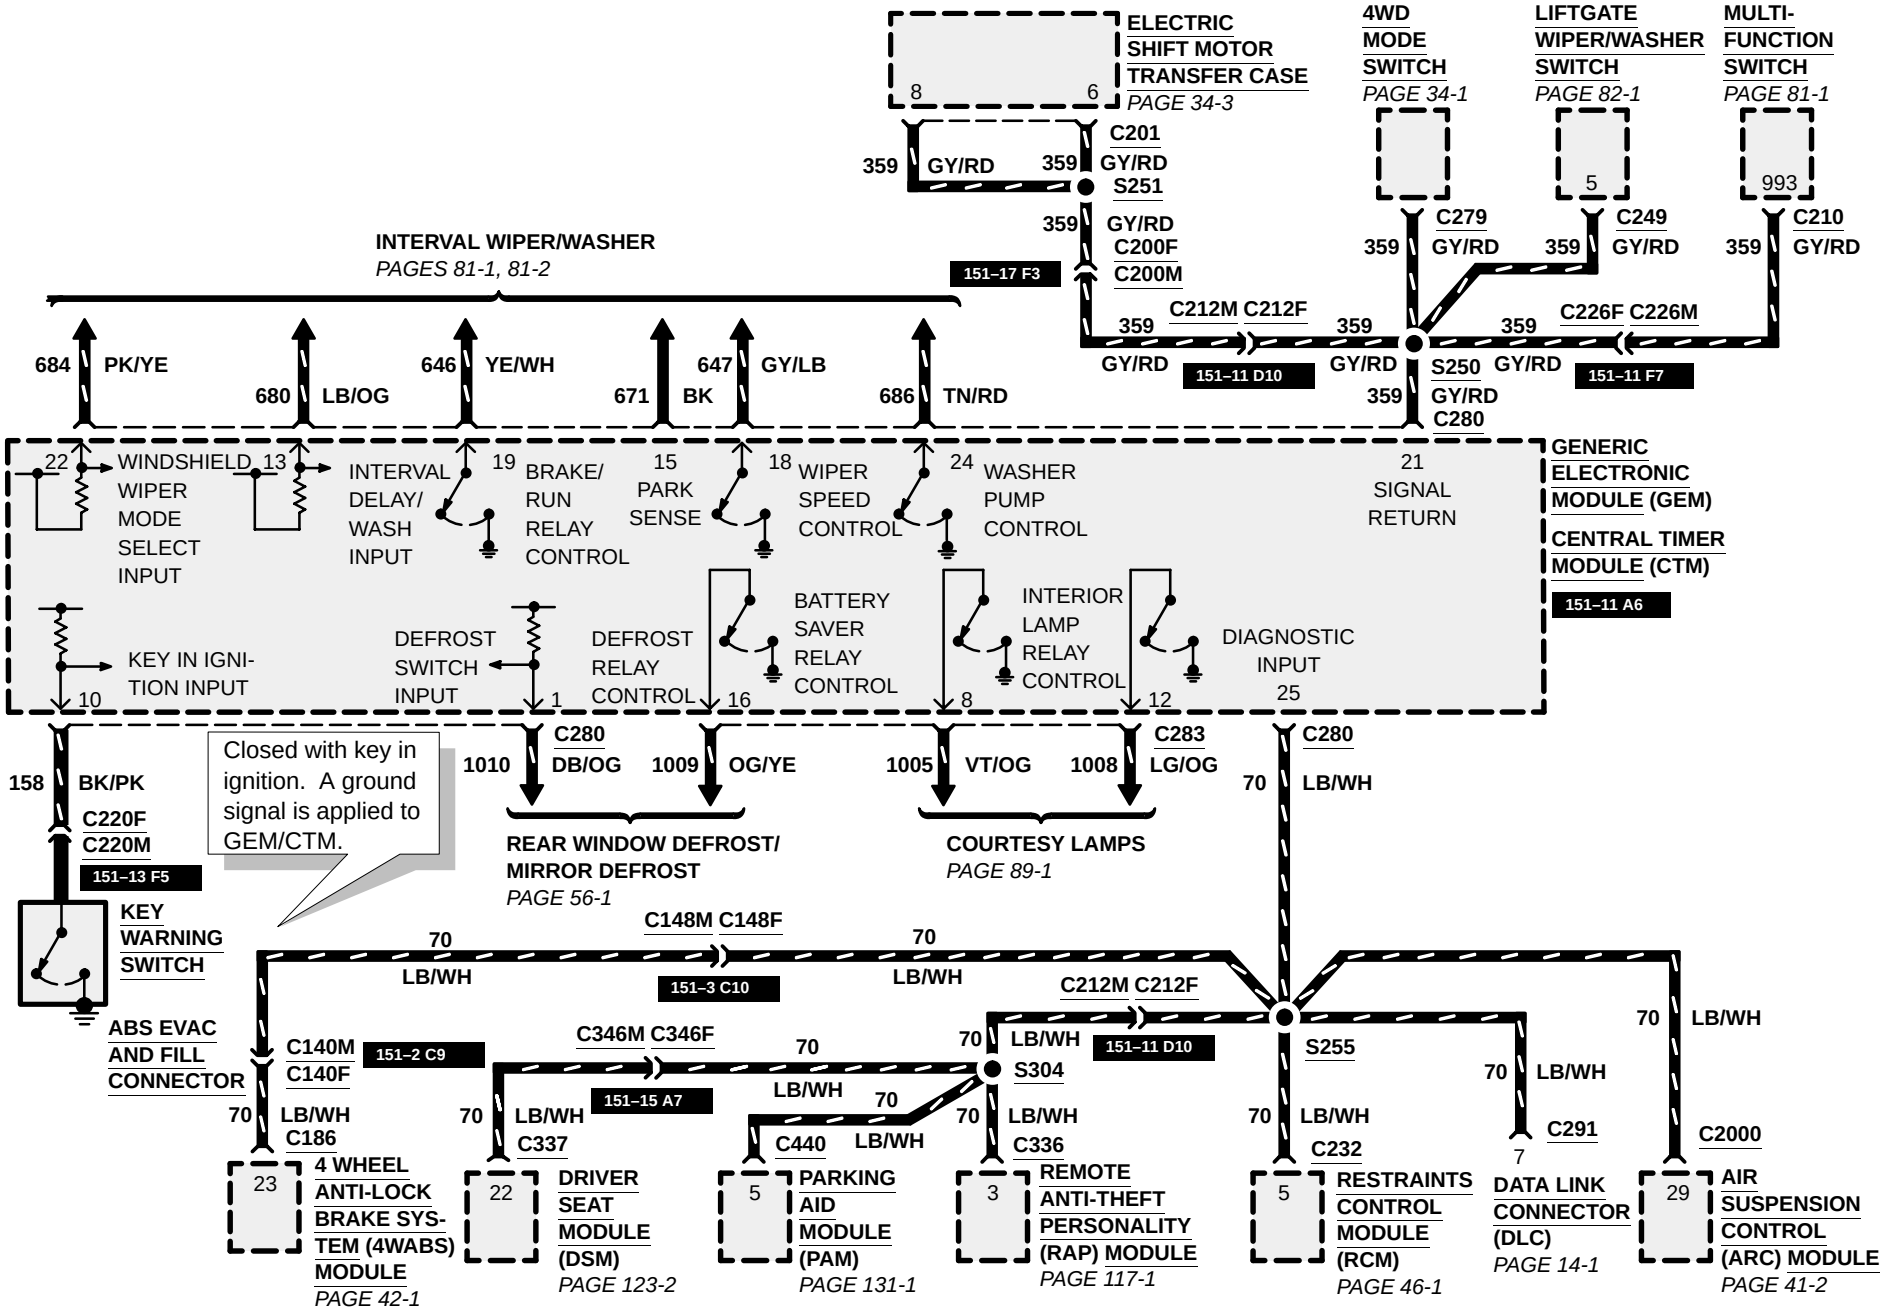
ELECTRIC SHIFT MOTOR TRANSFER CASE
PAGE 34-1
4WD MODE SWITCH
PAGE 34-1
LIFTGATE WIPER/WASHER SWITCH
PAGE 82-1
MULTI-FUNCTION SWITCH
PAGE 81-1
8
6
C201
359 GY/RD
359 GY/RD
S251
359 GY/RD
C200F
C200M
151–17 F3
INTERVAL WIPER/WASHER
PAGES 81-1, 81-2
C279
359 GY/RD
5
C249
359 GY/RD
993
C210
359 GY/RD
C212M C212F
359 GY/RD
151–11 D10
C226F C226M
359 GY/RD
151–11 F7
S250
359 GY/RD
C280
684 PK/YE
680 LB/OG
646 YE/WH
671 BK
647 GY/LB
686 TN/RD
22 WINDSHIELD WIPER MODE SELECT INPUT
13
INTERVAL DELAY/ WASH INPUT
19 BRAKE/ RUN RELAY CONTROL
15 PARK SENSE
18 WIPER SPEED CONTROL
24 WASHER PUMP CONTROL
21 SIGNAL RETURN
GENERIC ELECTRONIC MODULE (GEM)
CENTRAL TIMER MODULE (CTM)
151–11 A6
KEY IN IGNITION INPUT
10
DEFROST SWITCH INPUT
DEFROST RELAY CONTROL
1
BATTERY SAVER RELAY CONTROL
16
INTERIOR LAMP RELAY CONTROL
8
DIAGNOSTIC INPUT
12
25
158 BK/PK
C220F
C220M
151–13 F5
KEY WARNING SWITCH
Closed with key in ignition. A ground signal is applied to GEM/CTM.
1010 C280 DB/OG
1009 OG/YE
REAR WINDOW DEFROST/ MIRROR DEFROST
PAGE 56-1
1005 VT/OG
1008 C283 LG/OG
COURTESY LAMPS
PAGE 89-1
C280
70 LB/WH
C148M C148F
70 LB/WH
151–3 C10
70 LB/WH
C212M C212F
151–11 D10
ABS EVAC AND FILL CONNECTOR
C140M
C140F
151–2 C9
70 LB/WH
C186
23
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-1
C346M C346F
70 LB/WH
151–15 A7
70 LB/WH
C337
22
DRIVER SEAT MODULE (DSM)
PAGE 123-2
70 LB/WH
C440
5
PARKING AID MODULE (PAM)
PAGE 131-1
70 LB/WH
S304
70 LB/WH
C336
3
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGE 117-1
S255
70 LB/WH
C232
5
RESTRAINTS CONTROL MODULE (RCM)
PAGE 46-1
70 LB/WH
C291
7
DATA LINK CONNECTOR (DLC)
PAGE 14-1
70 LB/WH
C2000
29
AIR SUSPENSION CONTROL (ARC) MODULE
PAGE 41-2