C521

14A005

M220
Exterior rear view mirror, driver side (17682)

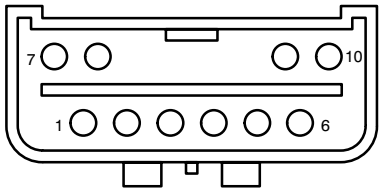

F10025

Pin	Circuit	Circuit function
1	540 (RD)	Right/Left mirror movement
2	542 (YE)	Mirror motor, feed
3	–	not used
4	541 (DB)	Up/Down mirror movement
5	57 (BK)	Ground
6	–	not used
7	1546 (PK)	Turn lamps, feed, Left mirror
8	–	not used
9	–	not used
10	–	not used

C523

14631
14A005

Y28
Speaker, left front (18808)

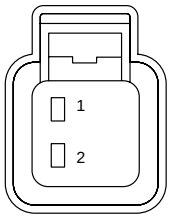

F02337

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –

C524

14A005

M80
Power window motor, driver side front (23395)



F02073

Pin	Circuit	Circuit function
1	996 (OG/WH)	Window motor, feed, Down
2	992 (WH/BK)	Master window adjust switch (14529), feed, Up

C525

14A005

M241
Door lock actuator, left front

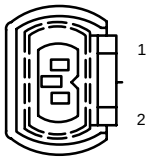

F02116

Pin	Circuit	Circuit function
1	163 (RD/OG)	Driver door unlock relay, switched power
2	117 (PK/BK)	Door lock, output

C526

14A005

N84
Door ajar switch, left front

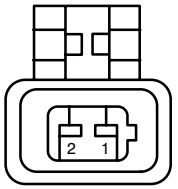

F02117

Pin	Circuit	Circuit function
1	344 (BK/YE)	Door ajar switch, left front
2	57 (BK)	Ground