C171

12B637

B48
Heated Oxygen
Sensor (HO2S) #11
(9F472)

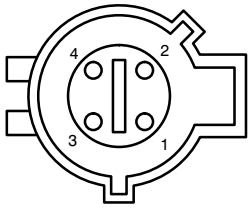

F04169

Pin	Circuit	Circuit function
1	15S-RJ14 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	91S-RJ14 (BN)	Ground, Switched
3	9-RJ14 (BN)	Sensor signal return (reference/ground)
4	8-RJ14 (WH)	Sensor signal

C172

12B637

B47
Heated Oxygen
Sensor (HO2S) #21
(9F472)

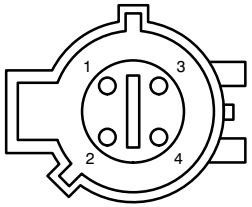

F04124

Pin	Circuit	Circuit function
1	15S-RJ15 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	91S-RJ15 (BN/RD)	Ground, Switched
3	9-RJ15 (BN/RD)	Sensor signal return (reference/ground)
4	8-RJ15 (WH/RD)	Sensor signal

C174

12B637

U10
Ignition transformer
capacitor 1 (18801)

F03101

Pin	Circuit	Circuit function
1	15-MD20B (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
1	15-MD20A (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)