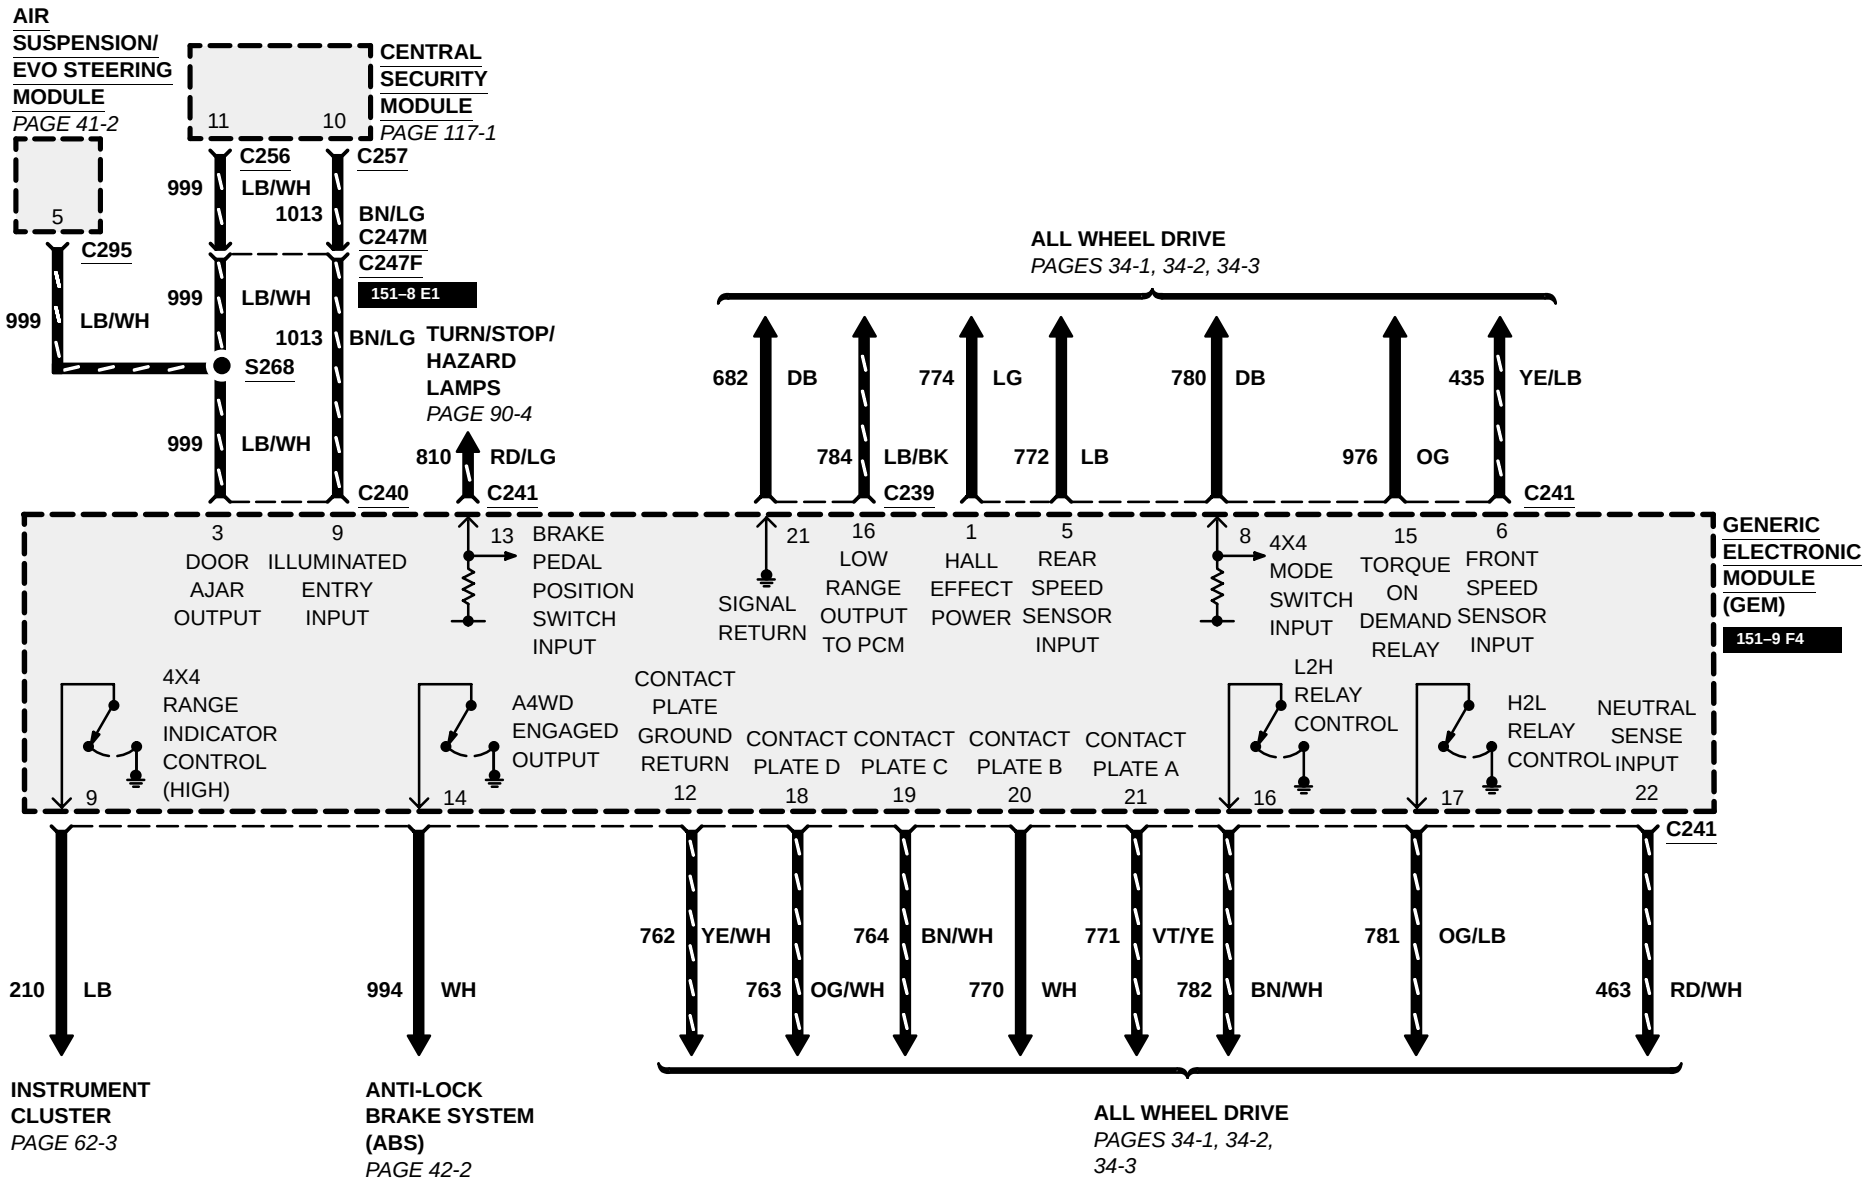
AIR SUSPENSION/ EVO STEERING MODULE
PAGE 41-2
5
C295
999 LB/WH
CENTRAL SECURITY MODULE
PAGE 117-1
11
10
C256
C257
999 LB/WH
1013 BN/LG
C247M
C247F
151–8 E1
999 LB/WH
1013 BN/LG
S268
999 LB/WH
TURN/STOP/ HAZARD LAMPS
PAGE 90-4
810 RD/LG
C240
C241
ALL WHEEL DRIVE
PAGES 34-1, 34-2, 34-3
682 DB
784 LB/BK
C239
774 LG
772 LB
780 DB
976 OG
435 YE/LB
C241
GENERIC ELECTRONIC MODULE (GEM)
151–9 F4
3 DOOR AJAR OUTPUT
9 ILLUMINATED ENTRY INPUT
13 BRAKE PEDAL POSITION SWITCH INPUT
21 SIGNAL RETURN
16 LOW RANGE OUTPUT TO PCM
1 HALL EFFECT POWER
5 REAR SPEED SENSOR INPUT
8 4X4 MODE SWITCH INPUT
15 TORQUE ON DEMAND RELAY
6 FRONT SPEED SENSOR INPUT
4X4 RANGE INDICATOR CONTROL (HIGH)
9
A4WD ENGAGED OUTPUT
14
CONTACT PLATE GROUND RETURN
12
CONTACT PLATE D
18
CONTACT PLATE C
19
CONTACT PLATE B
20
CONTACT PLATE A
21
L2H RELAY CONTROL
16
H2L RELAY CONTROL
17
NEUTRAL SENSE INPUT
22
C241
210 LB
994 WH
762 YE/WH
763 OG/WH
764 BN/WH
770 WH
771 VT/YE
782 BN/WH
781 OG/LB
463 RD/WH
INSTRUMENT CLUSTER
PAGE 62-3
ANTI-LOCK BRAKE SYSTEM (ABS)
PAGE 42-2
ALL WHEEL DRIVE
PAGES 34-1, 34-2, 34-3