* SUPERCREWZER

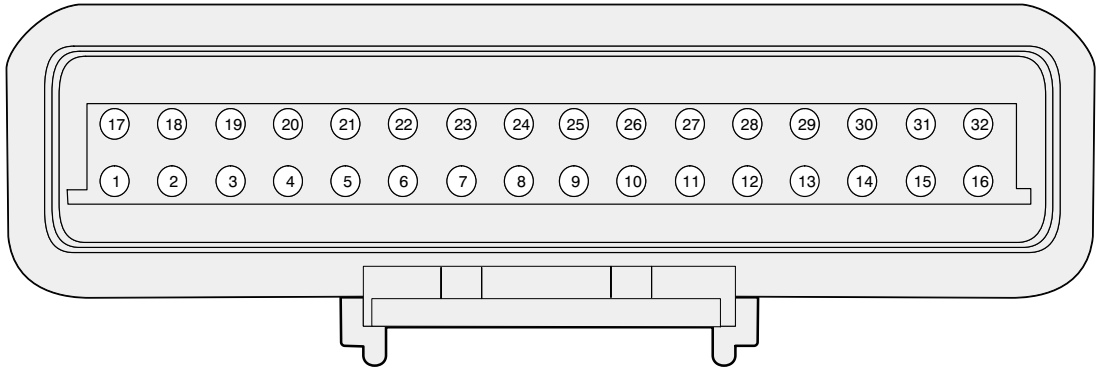

C362

ALLISON ELECTRONIC CONTROL UNIT

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	102 (WH)	To Electronic Transmission	17	130 (RD/LG)	To Electronic Transmission
2	121 (YE/BK)	To Electronic Transmission	18	* 52 (YE)	Trailer Signal
3	107 (VT)	To Electronic Transmission	19	* 52 (YE)	Trailer Signal
4	120 (PK/LB)	To Electronic Transmission	20	128 (PK/YE)	To Electronic Transmission
5	103 (WH/RD)	To Electronic Transmission	21	131 (VT/OG)	To Electronic Transmission
6	129 (LG)	To Electronic Transmission	22	110 (WH/LG)	To Electronic Transmission
7	104 (LB/OG)	To Electronic Transmission	23	* 52 (YE)	Trailer Signal
8	* 52 (YE)	Trailer Signal	24	* 52 (YE)	Trailer Signal
9	124 (BN)	To Electronic Transmission	25	135 (YE/RD)	To Electronic Transmission
10	* 63 (RD)	To Electronic Control Module	26	165 (TN/WH)	To Electronic Transmission
11	* 63 (RD)	To Electronic Control Module	27	147 (PK/LB)	To Electronic Transmission
12	162 (LG/RD)	To Electronic Transmission	28	* 63 (RD)	To Electronic Control Module
13	195 (TN/WH)	To Electronic Transmission	29	* 63 (RD)	To Electronic Control Module
14	141 (RD/PK)	Engine Speed Sensor	30	150 (DG/WH)	Engine Speed Sensor
15	149 (BN/LG)	To Electronic Transmission	31	140 (BK/PK)	To Electronic Transmission
16	139 (GY/YE)	Output Speed Sensor	32	148 (YE/RD)	Output Speed Sensor