C701

14A005

N111
Window adjust
switch, left rear
(14A412)

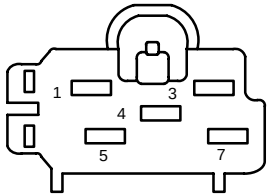

F07044

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	317 (GY/OG)	Window switch, feed, left rear, Down
3	885 (YE/LB)	Window switch, to, Window motor, left rear
4	193 (YE/LG)	Window safety relay, switched output
5	296 (WH/VT)	Fused accessory relay, switched power, output
6	884 (YE/BK)	Window switch, to, Window motor, left rear
7	316 (YE/LB0	Window switch, feed, left rear, Up

C703

14A005

M116
Power window mo-
tor, left rear (23394)

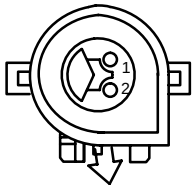

F02489

Pin	Circuit	Circuit function
1	884 (YE/BK)	Window switch, to, Window motor, left rear
2	885 (YE/LB)	Window switch, to, Window motor, left rear

C704

14A005

M64
Door lock actuator,
left rear (218A43)

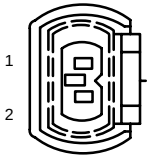

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door lock, feed
2	117 (PK/BK)	Door lock, output

C715

14A005

N237
Door ajar switch,
driver side rear
(14018)

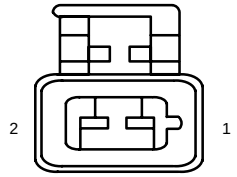

F02379

Pin	Circuit	Circuit function
1	346 (BK/WH)	Door ajar switch, right rear, signal
2	57 (BK)	Ground