C218b (GY)

14401

Air bag sliding contact (14A664)

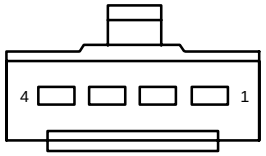

F04191

Pin	Circuit	Circuit function
1	614 (GY/OG)	Driver air bag, feed, monitor
2	615 (GY/WH)	Driver air bag, return
3	1516 (YE/WH)	Driver air bag, feed, monitor, stage II
4	1517 (RD/OG)	Driver air bag, return, stage II

C219 (BK)

14401

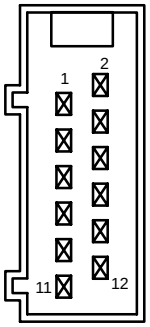

F12054

(1) 1494 (RD)
(2) 268 (BK/OG)
(3) 1495 (WH)
(4) 267 (BR/LG)
(5) 956 (OG/LG)
(6) 1542 (RD)
(7) 833 (TN)
(8) 48
(9) 832 (LB/PK)
(10) 1540 (DG)
(11) –
(12) 1541 (DB)

14A005

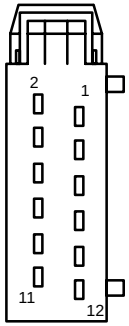

F12056

(1) 1494 (RD)
(2) 268 (BK/OG)
(3) 1495 (WH)
(4) 267 (BN/LG)
(5) 956 (OG/LG)
(6) 1542 (RD)
(7) 833 (TN)
(8) 48
(9) 832 (LB/PK)
(10) 1540 (DG)
(11) –
(12) 1541 (DB)

C220a (GY)

14401

Instrument cluster

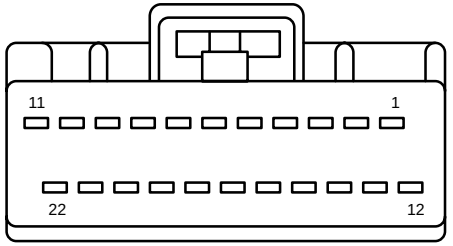

F22014

Pin	Circuit	Circuit function
1	–	not used
2	1403 (BK/WH)	Dimmer switch, input
3	1405 (LB/BK)	switch, Interior lamps, input
4	1410 (TN/OG)	switch, return
5	–	not used
6	–	not used
7	1411 (GY/OG)	Message center switch, input
8	–	not used
9	1414 (LG/VT)	Key warning switch (11A127), input
10	1402 (RD/WH)	Headlamps, On
11	1001 (WH/YE)	Voltage supplied at all times (overload protected)
12	702 (WH/BK)	Compass data, (+)
13	703 (WH/OG)	Compass data, (–)
14	–	not used
15	–	not used
16	–	not used
17	–	not used
18	1423 (WH/BK)	to Rear blower motor switch (front), High pressure sensor
19	–	not used
20	–	not used
21	–	not used
22	1400 (TN/WH)	Headlamp, Off