* SUPERCREW
** ALL OTHERS
*** W/PRETENSIONERS

REVISED

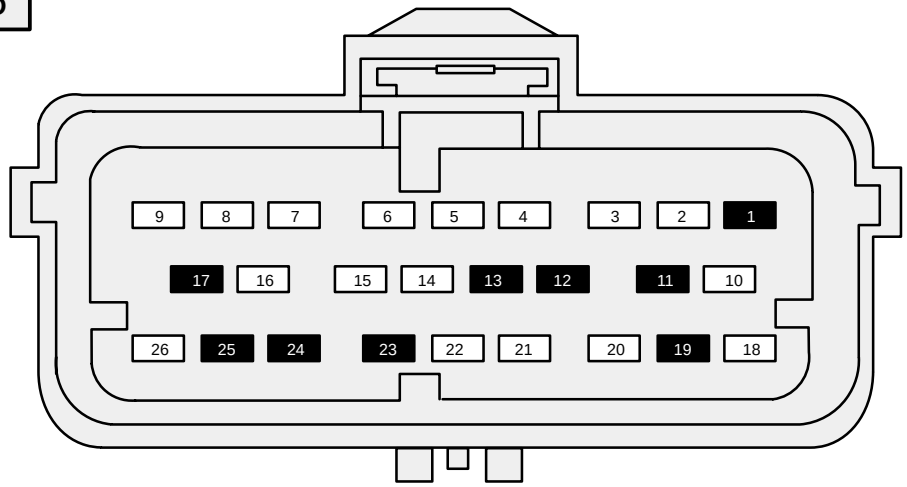

C208

RESTRAINTS CONTROL MODULE (RCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED	13	–	NOT USED
2	298 (VT/OG)	Power	14	*298 (VT/OG)	Power
3	614 (GY/OG)	Driver Air Bag Feed	15	***1081 (YE/RD)	Passenger Pretensioner Feed
4	615 (GY/WH)	Driver Air Bag Return	16	***1082 (YE/BK)	Passenger Pretensioner Return
5	70 (LB/WH)	Diagnostic Output	17	–	NOT USED
6	607 (LB/OG)	Passenger Air Bag Feed Monitor	18	***1079 (LG/RD)	Driver Pretensioner Feed
7	616 (PK/BK)	Passenger Air Bag Return	19	–	NOT USED
8	1112 (WH/LB)	Passenger Air Bag Deactivation Power Feed	20	608 (BK/YE)	Air Bag Indicator Lamp
			21	649 (BK/OG)	Ground
9	629 (BN)	Passenger Air Bag Deactivation Switch Lamp Driver	22	***1080 (LG/BK)	Driver Pretensioner Return
			23	–	NOT USED
10	**298 (VT/OG)	Power	24	–	NOT USED
	* 650 (BK/LB)	Vehicle ID #2	25	–	NOT USED
11	–	NOT USED	26	1083 (LB/BK)	Tone Request
12	–	NOT USED			