C427

14A005

P57
Joint connector

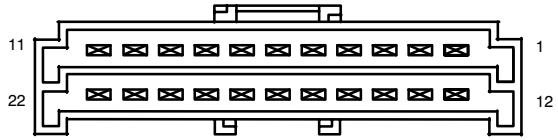

F22015

Pin	Circuit	Circuit function
1	75-MC1 (YE)	Voltage: Ignition switch in Accessory or Run
2	75-MC9 (YE/GN)	Voltage: Ignition switch in Accessory or Run
3	75-GP8 (YE/BK)	Voltage: Ignition switch in Accessory or Run
4	–	not used
5	–	not used
6	4-EA1 (GY)	Data link, bus positive
7	4-MC9 (GY/OG)	Data link, bus positive
8	4-EA10 (GY/BK)	Data link, bus positive
9	5-EA1 (BU)	Data link, bus negative
10	5-MC9 (BU/BK)	Data link, bus negative

Pin	Circuit	Circuit function
11	5-EA10 (BU/YE)	Data link, bus negative
12	29-MD41 (OG)	Voltage supplied at all times (not overload protected)
13	30-GP8 (RD/BK)	Voltage supplied at all times (not overload protected)
14	30-MC9B (RD/GN)	Voltage supplied at all times (not overload protected)
15	30-MC9C (RD/GN)	Voltage supplied at all times (not overload protected)
16	30-MD1A (RD/YE)	Voltage supplied at all times (not overload protected)
17	–	not used
18	–	not used
19	–	not used
20	–	not used
21	–	not used
22	–	not used

C428

14A005

E57
Luggage compartment lamp (13A756)



F02009

Pin	Circuit	Circuit function
1	29S-LB25 (OG/BU)	Voltage supplied at all times (overload protected), Switched
2	31S-LB25 (BK/BU)	Ground, Switched

C429

14A005

N444
Luggage compartment lid ajar switch (19A434)

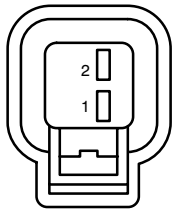

F02069

Pin	Circuit	Circuit function
1	8-GL20 (WH/BK)	Sensor signal
2	31-GL20 (BK/RD)	Ground