C918

14334

E18
Interior lamp, front

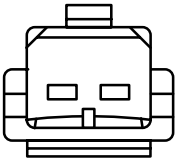

F02233

Pin	Circuit	Circuit Function
1	1005 (VT/OG)	Generic Electronic Module (GEM), to, Battery saver relay - output
2	1008 (LG/OG)	Interior lamp relay, control

C919

PIA

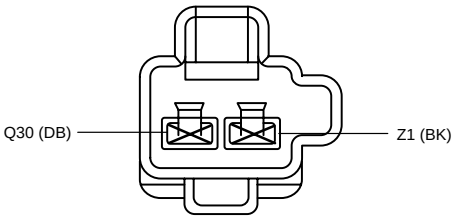

F02347

14334

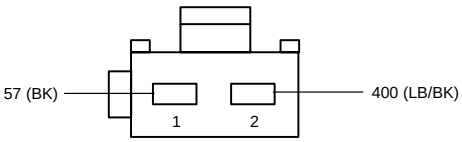

F02349

C920

PIA

M201
Roof opening panel
motor assembly

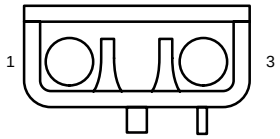

F03209

Pin	Circuit	Circuit Function
1	Q5 (RD)	Switched between: Battery voltage, Ground or Open
2	-	not used
3	Q6 (OG)	Switched between: Battery voltage, Ground or Open

C921

PIA

A214
Roof opening panel
module



F08185

Pin	Circuit	Circuit Function
1	Q46 (OG/WH)	Roof opening panel position switch, signal
2	Q41 (WH)	Switched between: Battery voltage, Ground or Open
3	Q43 (VT)	Switched between: Battery voltage, Ground or Open
4	Z1 (BK)	Ground
5	-	not used
6	Q30 (DB)	Accessory relay, output
7	Q5 (RD)	Switched between: Battery voltage, Ground or Open
8	Q6 (OG)	Switched between: Battery voltage, Ground or Open