C3014 (GY)

14401

A225
Driver safety belt retractor pretensioner

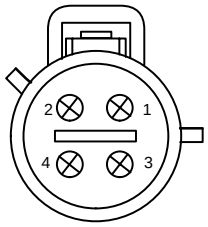

F04269

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
3	85 (BN/LB)	Safety belt buckle switch, input
4	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed

C4033 (GY)

14405

A31
Fuel tank unit

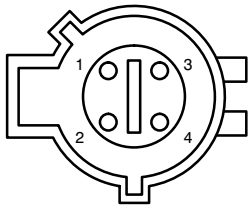

F04075

Pin	Circuit	Circuit Function
1	29 (YE/WH)	Fuel pump/fuel gauge sender
2	787 (PK/BK)	Fuel pump, Power
3	396 (BK/OG)	Ground
4	57 (BK)	Ground

C3061

14405

N253
4x4 Mode switch

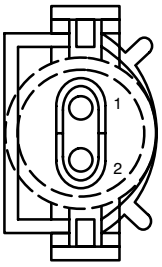

F02031

Pin	Circuit	Circuit Function
1	784 (LB/BK)	Four–wheel drive, indicator, Low
2	783 (GY)	Four–wheel drive, indicator, High

C4074 (GY)

14405

A31
Fuel tank unit

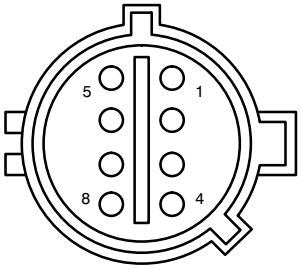

F08048

Pin	Circuit	Circuit Function
1	396 (BK/OG)	Fuel sender, logic ground
2	787 (PK/BK)	Fuel pump, Power
3	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
4	351 (BN/WH)	Reference, voltage
5	29 (YE/WH)	Fuel pump/fuel gauge sender
6	57 (BK)	Ground
7	359 (GY/RD)	signal, return
8	791 (RD/PK)	Fuel tank pressure transducer sensor