4R70W

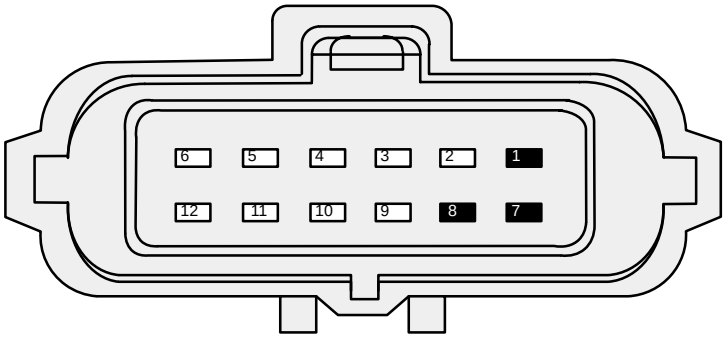

C115

DIGITAL TRANSMISSION RANGE (DTR) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	359 (GY/RD)	Signal Return
3	199 (LB/YE)	TR3A Signal to PCM
4	1144 (WH/YE)	TR1 Signal to PCM
5	1145 (LB/BK)	TR2 Signal to PCM
6	1146 (LG/RD)	TR4 Signal to PCM
7	–	NOT USED
8	–	NOT USED
9	296 (WH/VT)	Fused Power Feed (Hot in Run)
10	32 (RD/LB)	Starter Relay Enable
11	140 (BK/PK)	Reversing Lamp Output (Hot in Reverse)
12	1093 (TN/RD)	Start Signal from Steering Column/ Ignition/Lighting Control Module

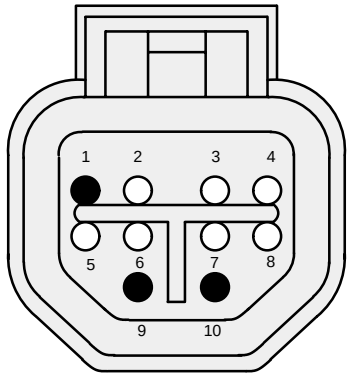

C110

4R70W TRANSMISSION

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	359 (GY/RD)	Signal Return
3	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid
4	361 (RD)	Vehicle Power
5	923 (OG/BK)	Transmission Fluid Temperature (TFT) Input
6	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid
7	237 (OG/YE)	Shift Solenoid A
8	315 (VT/OG)	Shift Solenoid B
9	–	NOT USED
10	–	NOT USED