C3037

14A005

N493
Climate controlled seat switch, passenger side

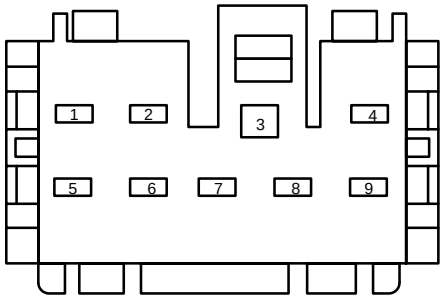

F09035

Pin	Circuit	Circuit function
1	–	not used
2	1040 (RD/BK)	Voltage in Run (overload protected)
3	–	not used
4	–	not used
5	57 (BK)	Ground
6	581 (RD)	Seat heater switch, driver side, to, Heated seat module, driver side front
7	461 (OG)	Electronic Automatic Temperature Control (EATC) module (19980), to, Heated seat module, driver side front
8	579 (BK/OG)	Heated seats
9	580 (BN)	Heated seats

C3041

14A005

A14
Subwoofer amplifier (18C804)

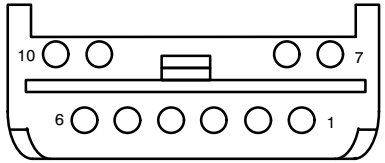

F10009

Pin	Circuit	Circuit function
1	173 (DG/VT)	Radio (18806) – Subwoofer, High, mute
2	–	not used
3	694 (BK/LG)	Ground
4	–	not used
5	720 (RD/YE)	Voltage supplied at all times (overload protected)
6	–	not used
7	167 (BN/OG)	TX, signal
8	168 (RD/BK)	RX, signal
9	–	not used
10	–	not used

C3047

14A005



F02257

(1) 1259 (WH/YE)

14A699

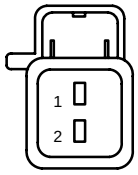

F02042

(2) 1260 (BN/YE)