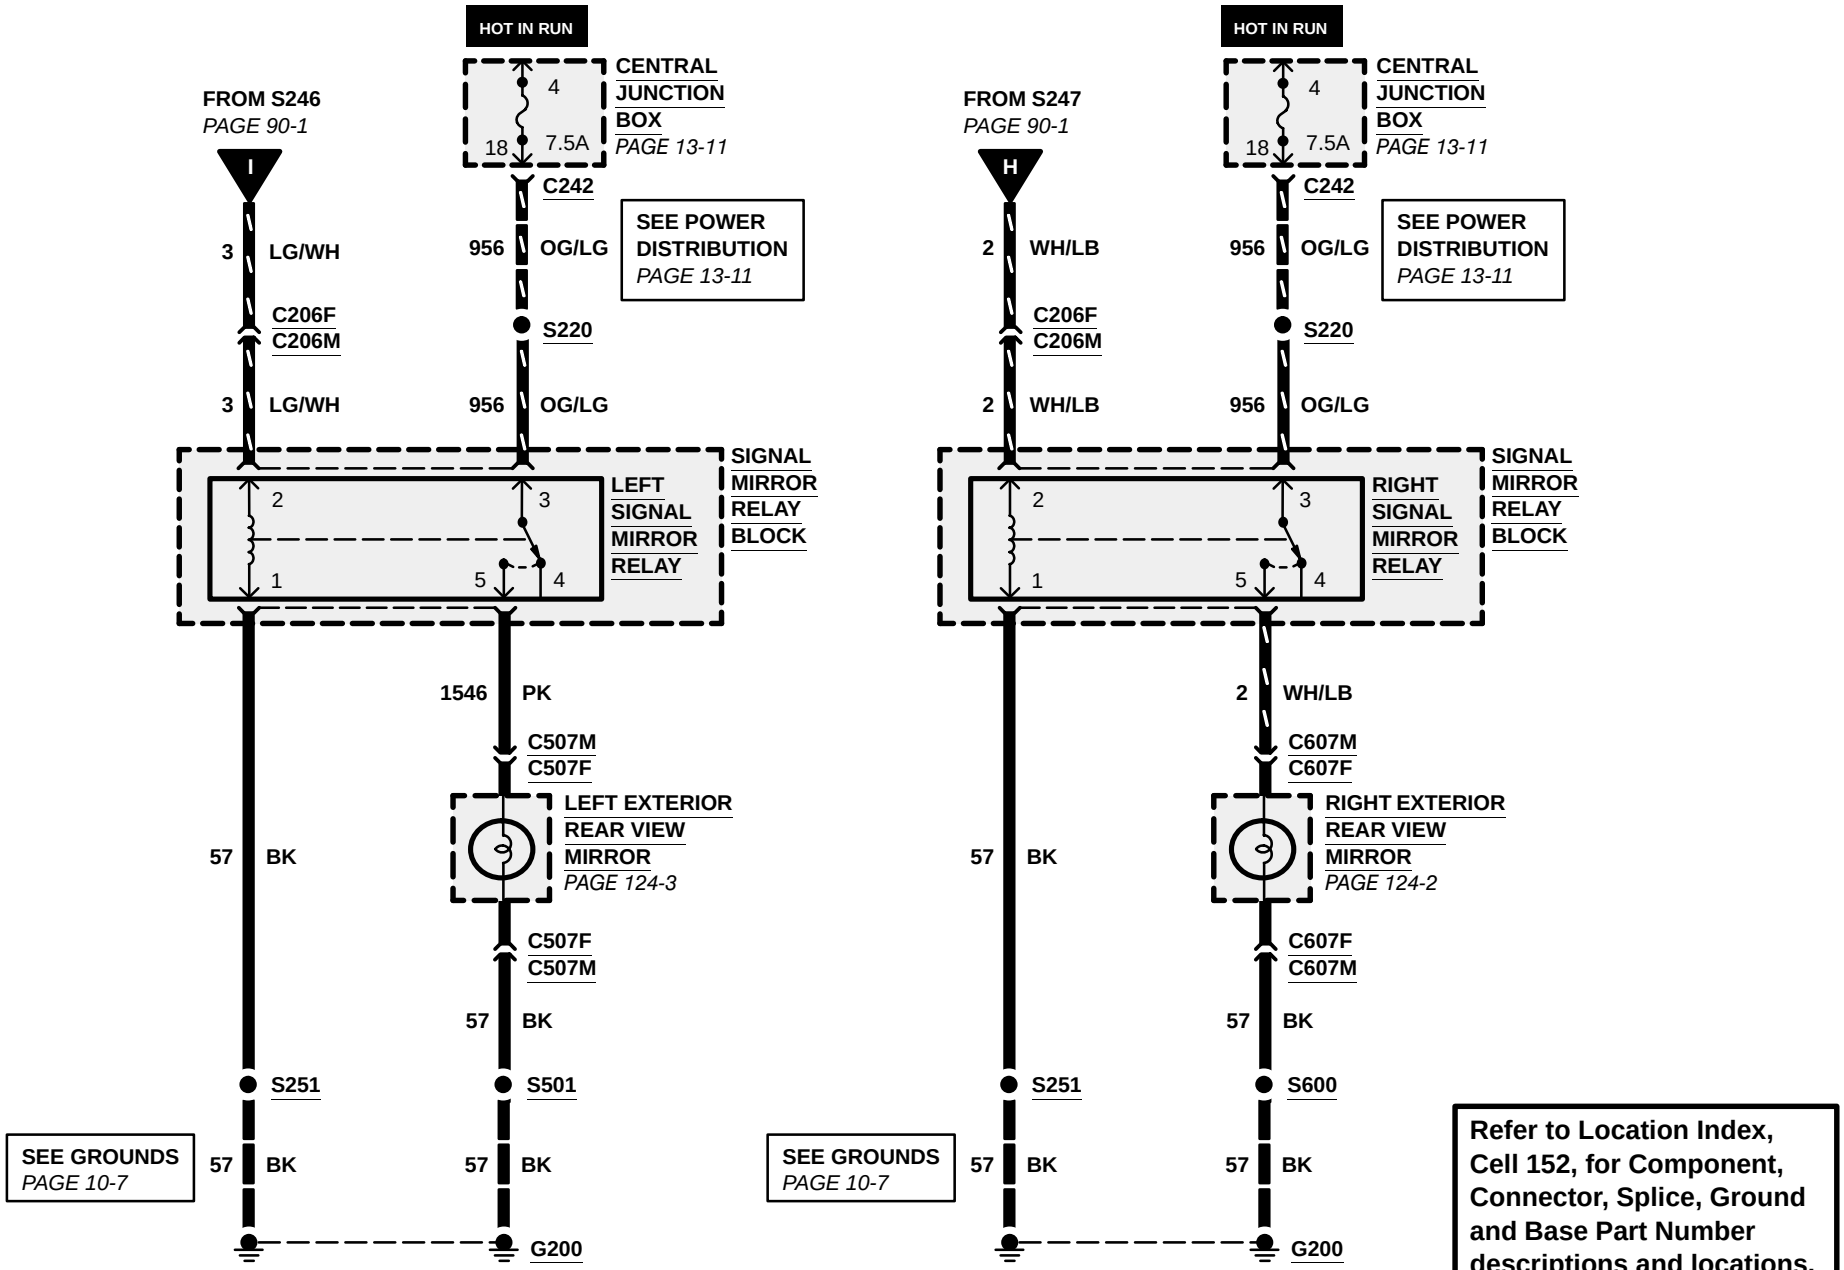
HOT IN RUN
CENTRAL JUNCTION BOX
PAGE 13-11
4
18
7.5A
C242
SEE POWER DISTRIBUTION
PAGE 13-11
FROM S246
PAGE 90-1
I
3
LG/WH
C206F
C206M
956
OG/LG
S220
SIGNAL MIRROR RELAY BLOCK
LEFT SIGNAL MIRROR RELAY
2
3
1
5
4
1546
PK
C507M
C507F
LEFT EXTERIOR REAR VIEW MIRROR
PAGE 124-3
57
BK
S251
S501
SEE GROUNDS
PAGE 10-7
G200
FROM S247
PAGE 90-1
H
2
WH/LB
C607M
C607F
RIGHT EXTERIOR REAR VIEW MIRROR
PAGE 124-2
S600
RIGHT SIGNAL MIRROR RELAY
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.