F2.36

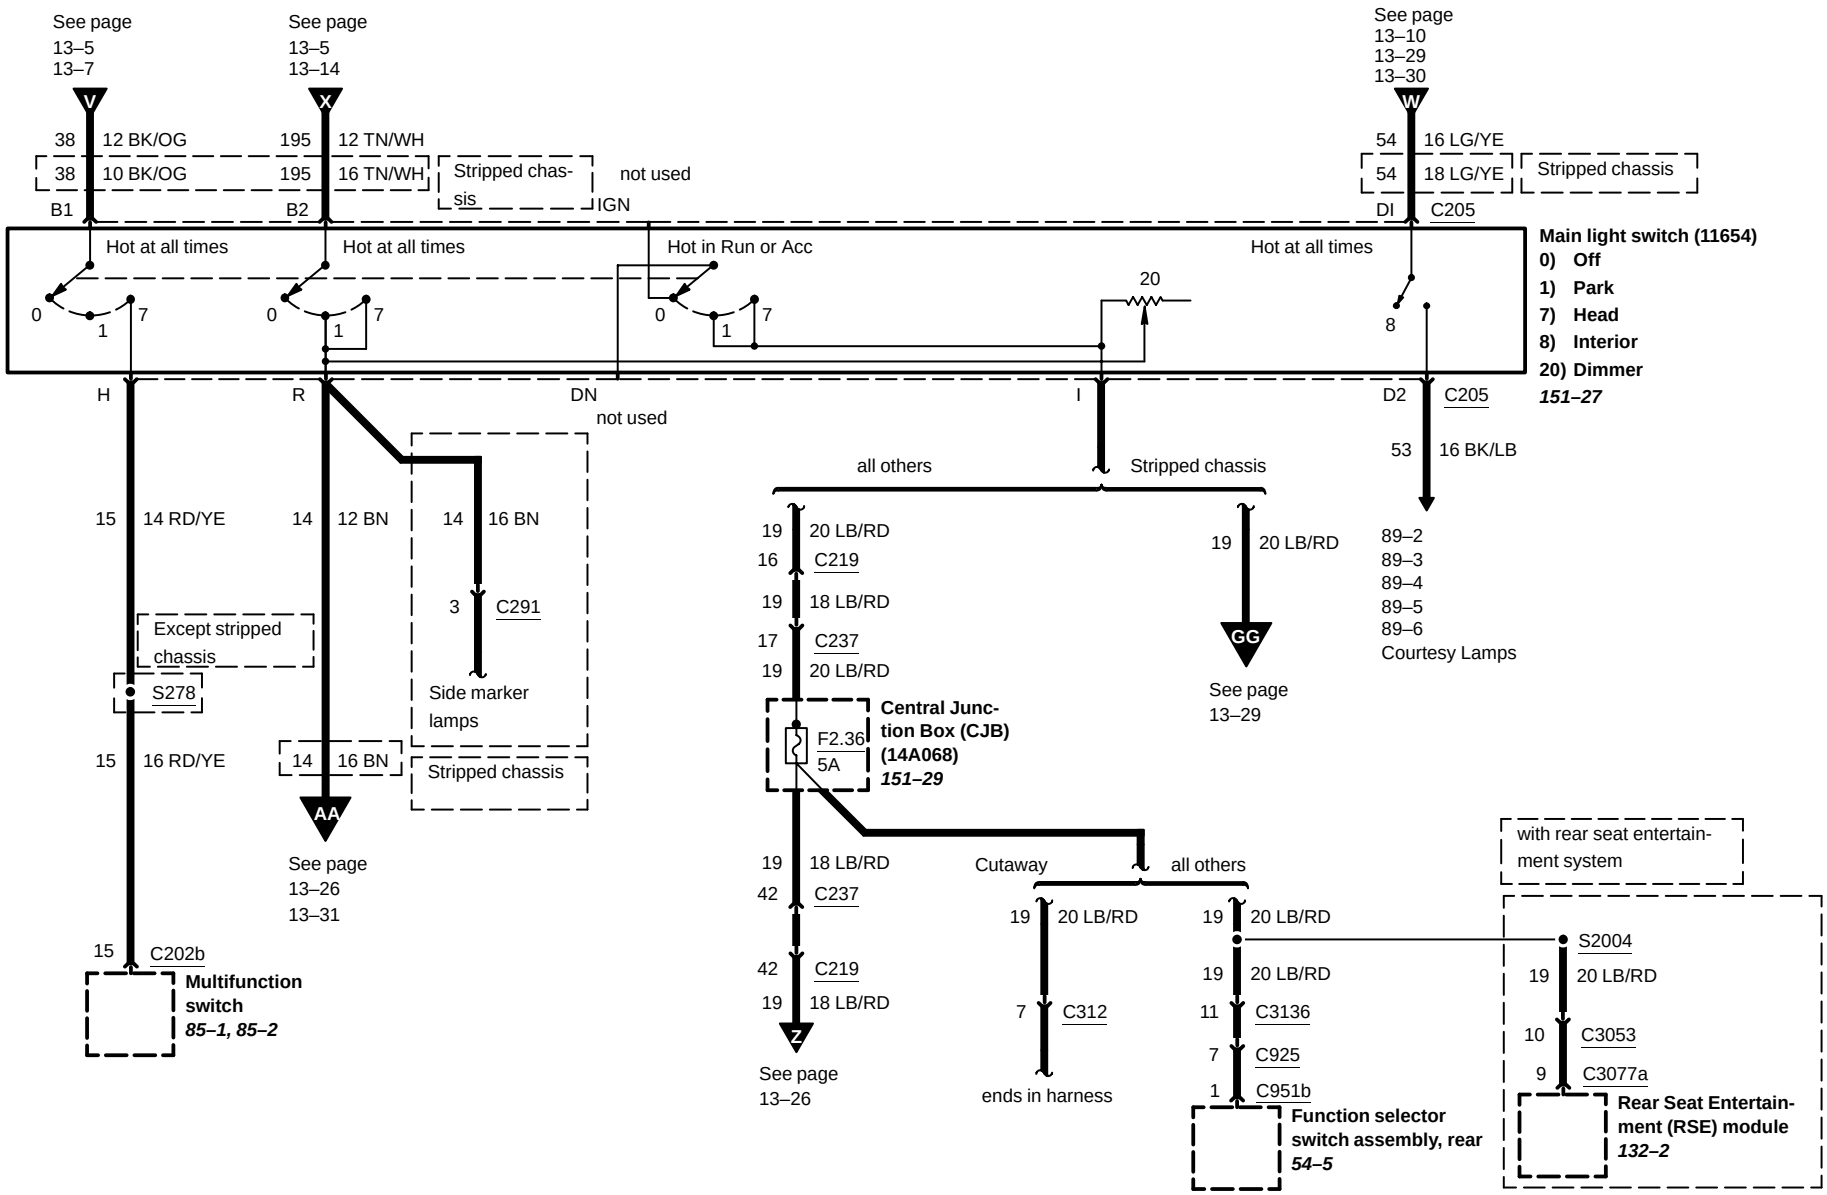
See page 13–5 13–7
See page 13–5 13–14
See page 13–10 13–29 13–30
V
X
W
38 12 BK/OG
38 10 BK/OG
195 12 TN/WH
195 16 TN/WH
Stripped chassis
not used
IGN
54 16 LG/YE
54 18 LG/YE
Stripped chassis
B1
B2
DI C205
Hot at all times
Hot at all times
Hot in Run or Acc
Hot at all times
20
Main light switch (11654)
0) Off
1) Park
7) Head
8) Interior
20) Dimmer
151–27
H
R
DN
not used
I
D2 C205
53 16 BK/LB
all others
Stripped chassis
15 14 RD/YE
14 12 BN
14 16 BN
3 C291
Except stripped chassis
S278
Side marker lamps
15 16 RD/YE
14 16 BN
Stripped chassis
AA
See page 13–26 13–31
15 C202b
Multifunction switch
85–1, 85–2
19 20 LB/RD
16 C219
19 18 LB/RD
17 C237
19 20 LB/RD
Central Junction Box (CJB) (14A068)
151–29
F2.36 5A
19 20 LB/RD
GG
See page 13–29
89–2
89–3
89–4
89–5
89–6
Courtesy Lamps
19 18 LB/RD
42 C237
Cutaway
all others
with rear seat entertainment system
42 C219
19 18 LB/RD
Z
See page 13–26
19 20 LB/RD
7 C312
ends in harness
19 20 LB/RD
19 20 LB/RD
11 C3136
7 C925
1 C951b
Function selector switch assembly, rear
54–5
S2004
19 20 LB/RD
10 C3053
9 C3077a
Rear Seat Entertainment (RSE) module
132–2