C703

14A005

Power window motor, left rear (23394)

Excursion

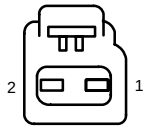

F02457

Pickup

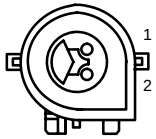

F02469

Pin	Circuit	Circuit function
1	885 (YE/LB)	Window switch, to, Window motor, left rear
2	884 (YE/BK)	Window switch, to, Window motor, left rear

C704

14A005

Door lock actuator, left rear (218A43)

F02116

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C712

14A005

Speaker, left middle

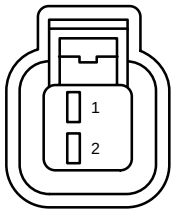

F02069

Pin	Circuit	Circuit function
1	827 (TN/WH)	Audio signal positive
2	801 (TN/YE)	Audio signal negative

C715

14A005

Door ajar switch, driver side rear (14018)

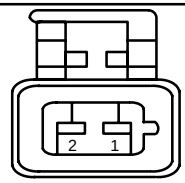

F02379

Pin	Circuit	Circuit function
1	346 (BK/WH)	switch sense, without remote keyless entry
	759 (LG/YE)	switch sense, with remote keyless entry
2	57 (BK)	Ground

C801

14A005

Window adjust switch, right rear (14A412)

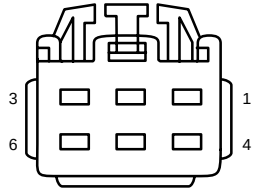

F06213

Pin	Circuit	Circuit function
1	319 (YE/BK)	Window switch, feed, right rear, Up
2	882 (BN/YE)	Window switch, to, Window motor, right rear
3	193 (YE/LG)	switched power
4	–	not used
5	881 (BN)	Window switch, to, Window motor, right rear
6	320 (RD/BK)	Window switch, feed, right rear, Down