## C401b

### 14A411

Vehicle Emergency Message System (VEMS) module

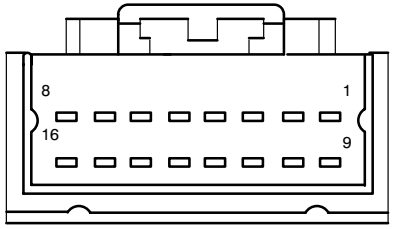


F16097

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | – | not used |
| 2 | 708 (DG) | Transmit audio, in On/Off |
| 3 | 709 (GY) | Receive audio unit |
| 4 | – | not used |
| 5 | 717 (TN) | Handset, audio ground |
| 6 | 866 (WH) | Inertia Fuel Shutoff (IFS) switch (9D362), Ground, input |
| 7 | 1887 (DB) | to, Auto–dimming interior mirror unit |
| 8 | 1888 (PK) | to, Auto–dimming interior mirror unit |
| 9 | 716 (YE) | R–Data |
| 10 | 964 (DB/LG) | fused feed, Accessory |
| 11 | 711 (RD) | T–Data |
| 12 | 48 | Shield |
| 13 | 833 (TN) | Audio corporate protocol B |
| 14 | 832 (LB/PK) | Audio corporate protocol A |
| 15 | – | not used |
| 16 | – | not used |

## C403a

### 14A411

A218 Cellular phone module

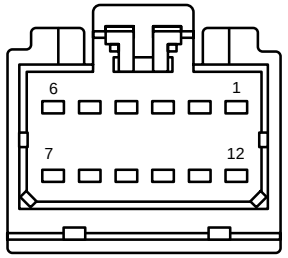


F12105

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1884 (OG) | Audio corporate protocol B |
| 2 | – | not used |
| 3 | 694 (BK/LG) | Ground |
| 4 | 828 (VT/LB) | fused feed, Hot at all times |
| 5 | 964 (DB/LG) | fused feed, Accessory |
| 6 | 1883 (LB) | Audio signal negative |
| 7 | 713 (WH) | Microphone, Ground |
| 8 | 714 (VT) | Microphone, audio |
| 9 | 828 (VT/LB) | fused feed, Hot at all times |
| 10 | 694 (BK/LG) | Ground |
| 11 | 1881 (RD) | Radio (18806), to CD changer, Right – |
| 12 | – | not used |